



belling

---

**INSIDE  
EVERY  
GREAT  
HOME**

---



User Manual

**Countries of destination:**

GB - Great Britain   
IE - Ireland   
DE - Germany  
ES - Spain

FR - French  
IT - Italy  
PL - Poland  
NL - Netherlands

SE - Sweden  
CN - China  
NZ - New Zealand  
AU - Australia

To contact Belling about your appliance, please call:



**Customer Care Helpline**

**0344 815 3746**

in case of difficulty within the UK



**Warranty Registration**

**0800 952 1068**

\*Please call our Customer Care team for extended warranty



**Spares Store**

**0344 815 3745**



To register your appliance online:

**[www.belling.co.uk](http://www.belling.co.uk)**



To contact us by email:

**[gdhainfo@gdha.com](mailto:gdhainfo@gdha.com)**



To register your appliance by mail:

**Please complete the warranty card  
and return to the address supplied**



Alternatively general, spares and service information is available from our website at: **[www.belling.co.uk](http://www.belling.co.uk)**

Calls are charged at the basic rate, please check with your telephone service provider for exact charges

Your new appliance comes with our **12-month guarantee**, protecting you against electrical and mechanical breakdown. To register, please complete the registration form included, register online or by phone. For full terms & conditions of the manufacturer's guarantee, please refer to the website above. In addition, you may wish to purchase an extended warranty. A leaflet explaining how to do this is included with your appliance.

Our policy is one of constant development and improvement, therefore we cannot guarantee the strict accuracy of all of our illustrations and specifications. Changes may have been made subsequent to publishing.

Glen Dimplex Home Appliances, Stoney Lane, Prescott, Merseyside, L35 2XW

# INTRODUCTION

---

## ACKNOWLEDGEMENT

Thank you for purchasing our product. We hope you enjoy using the many features and benefits it provides.

This user guide book is designed to help you through each step of owning your new product.

Please read it carefully before you start using your appliance, as we have endeavored to answer as many questions as possible, and provide you with as much support as we can.

General information, spares and service information is available from our website.

Ensure that other people using the product are familiar with these instructions as well.

If you should find something missing from your product or have any questions that are not covered in this user guide, please contact us (see contact information inside the front cover).

### European Directives



This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product

This appliance conforms to European Directive regarding Eco design requirements for energy-related products.

When you have unpacked the oven, make sure that it has not been damaged in any way. If you have any doubts at all, do not use it: contact a professionally qualified person. Keep packing materials such as plastic bags, polystyrene, or nails out of the reach of children because these are dangerous to children.



### UK ONLY GAS WARNING:

If you smell gas, Do not try to light any appliance. Do not touch any electrical switch.  
Call the Gas Emergency Help line at **0800 111999**

## SAFETY

---

### WARNING

- During use the appliance becomes hot. Care should be taken to avoid touching heating elements.
- Children less than 8 years of age shall be kept away unless continuously supervised. This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Do not use a steam cleaner on any range cooker, hobs and oven appliances.
- Ensure that the appliance is switched off before replacing the lamp to avoid electric shock.
- Never put items directly on the base of the oven or cover the oven base with foil, as this can cause the base element to overheat.
- When the oven is first switched on, it may give off an unpleasant smell. Please use the conventional or fanned cooking function at 250°C for 90 minutes to clean oil impurities inside the cavity. Ensure that the room is well ventilated during this process.
- Do not allow children to go near the oven when it is operating, especially when the grill is on.
- The means for disconnection must, be incorporated in the fixed wiring in accordance with the wiring specifications.
- An all-pole isolation switch must be incorporated into the fixed wiring in accordance with the wiring rules in force .
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance must be fitted to a switch providing all pole

disconnection with a minimum contact separation of 3mm.

- Connection should be made with a suitable flexible cable with a minimum temperature rating of 70°C.
- Although every care has been taken to ensure this appliance has no sharp edges. We recommend that you wear protective gloves when installing and moving this appliance. This will prevent injury.
- Always switch off your appliance and allow it to cool down before you clean any part of it.

## CAUTION

- This appliance must not be installed behind a decorative door in order to avoid overheating.
- The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- Ensure shelving is correctly installed, see the sections on shelf runners and shelf location within this book

- **Fire Safety Advice**

If you do have a fire in the kitchen, don't take any risks - get everyone out of your home and call the Fire Service.

**If you have an electrical fire in the kitchen:**

- Pull the plug out, or switch off the power at the fuse box - this may be enough to stop the fire immediately
- Smother the fire with a fire blanket, or use a dry powder or carbon dioxide extinguisher
- Remember: never use water on an electrical or cooking oil fire.


- **Other Safety Advice**

- Servicing should be carried out only by authorised personnel.
- Do not operate the appliance without the glass panels correctly fitted.
- There is a risk of electric shock, so always make sure you have turned off and switched your appliance off at the wall before starting any cleaning or maintenance. Always allow the product to cool down before you change a bulb.
- Do not modify the outer panels of this appliance in any way.
- This appliance must be earthed.
- The appliance must never be disconnected from the mains supply during use, as this will seriously affect the safety and performance, particularly in relation to surface temperatures becoming hot and gas operated parts not working efficiently. The cooling fan (if fitted) is designed to run on after the control knob has been switched off.
- **GAS WARNING!** - If you smell gas: Do not try to light any appliance, Do not touch any electrical switch. Contact the national gas emergency service on 0800 111 999.

# GETTING TO KNOW YOUR APPLIANCE





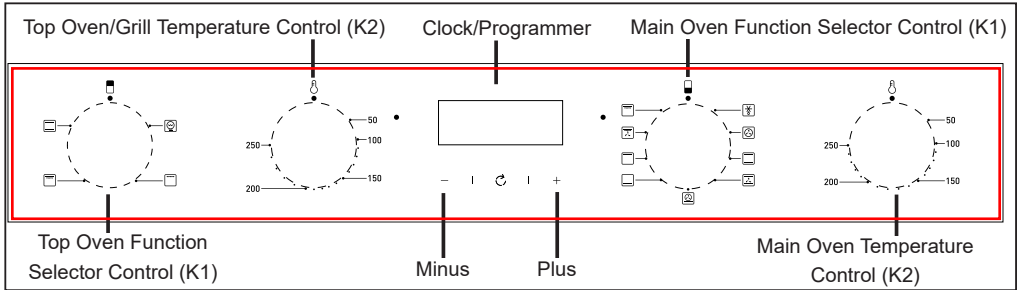

**Note:** Your appliance layout may differ depending on the model.












## Multifunction Control Panel





## OVEN/GRILL FUNCTIONS

**Note:** Your oven may not have all of the functions shown here. We recommend for best cooking results, please preheat for 15 minutes.

Symbol	Top Oven Function Descriptions
	Oven Function Selector Switch:- Use to select the desired oven function.
	Oven Lamp:- Can be operated on its own for cleaning or maintenance without any heating elements coming on. The Oven lamp will also come on when any oven function is selected.
	Single Grill:- The central area under the grill becomes hot and is ideal for toasting and grilling meats such as sausages, chops and steaks. Use with the door open. Place food in the middle of the grill pan.
	Dual Grill:- Operates inner and outer grill elements. This function is useful for toasting and grilling thinner meats, like bacon. Use with the door open. Place food in the middle part of the grill pan.
	Conventional Cooking:- The top and bottom elements work together to provide traditional cooking and is ideal for roasting.
	Top Oven Temperature Control:- Use to select the oven temperature.

Symbol	Main Oven Function Descriptions
	Oven Function Selector Switch:- Use to select the desired oven function.
	Defrost and Dough Proving:- Can be used to gently defrost frozen foods, This setting can also be used to help dough to rise faster than at room temperature.
	Fanned Oven:- The even temperature in the oven makes this function suitable for batch baking, or batch cooking foods on one or more levels at the same time.
	Conventional Cooking:- The top and bottom elements work together to provide traditional cooking and is ideal for roasting.
	Fan Assist:- Combination of the fan and both top and bottom heating elements provide even heat distribution around the food. Dishes are lightly browned on the outside and still moist on the inside. Note: This function is suitable for grilling or roasting big pieces of meat at a higher temperature.
	Pizza Function:- Fan element and circulation fan come on to cook the pizza or quiche, while the base element comes on to brown the base.
	Base Heat:- Ideal when additional base heat is required in the cooking process, e.g. the base heat can be used to provide additional browning for dishes such as pizza, pies and quiche. Use this function towards the end of the cooking process.
	Top Heat:- Ideal for browning off the tops of food as it is not as intense as the grilling function, Provides additional browning for dishes like lasagna or cauliflower cheese, Use this function towards the end of the cooking cycle.
	Fanned Grill:- The fan forces air around the food and is ideal for thinner foods such as bacon, fish and gammon steaks. Foods require less turning. Use this function with the oven door closed.
	Dual Grill:- Operates inner and outer grill elements. This function is useful for toasting and grilling thinner meats, like bacon. Use with the door open. Place food in the middle part of the grill pan.
	Main Oven Temperature Control:- Use to select the oven temperature.

# Oven

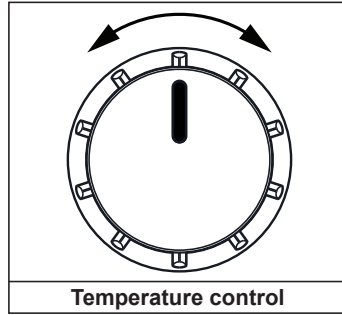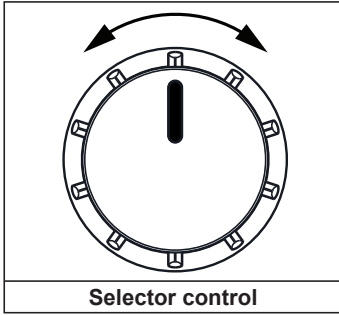

## Cooling Fan

When cooking is finished, paused, or if the central oven temperature is over a specific temperature, the cooling fan will continue working for around 15 minutes. When the central oven temperature drops below the specific temperature, the cooling fan will stop.

## To use your appliance

### To select a Cooking Function and Cooking Temperature

1. Begin by turning K1 to the desired cooking function.
2. Rotate K2 to select the desired cooking temperature. This can be adjusted during use.



# Clock/Programmer

**Note:** The image below is a generic timer image. Your clock / programmer may not have all these functions



Minute minder



Cooking time / Duration



End of cooking time



Clock Symbol



Keylock



Cookpot Symbol

**Auto**

Automatic mode

**Man**

Manual mode

L 1,2,3

Volume level

23:59

7-segment display

99:00

Max. adjustable minute minder

23:59

Max. adjustable cooking time

**h:min**

Display hours:minutes

**min:sec**

Display minutes:seconds

## Setting the Time of Day

This can be done when the appliance is first connected to the power supply or at any point afterwards providing the oven is in standby (i.e not operating)

The clock is displayed as “hh:mm” and is a 24 hour clock.

1. Press the function key repeatedly until the clock symbol flashes.
2. While the clock symbol is flashing, use the plus and/or minus keys to set the current time of day.
3. About 7 seconds after the last press of the plus or minus key, the clock symbol stops flashing and the time of day has been accepted.

**Note:** Always set the time of day before using the automatic cooking programme, because if you change the time of day after setting an automatic cooking programme, then the automatic cooking programme will be cancelled.

**Note:** If the clock is not set when first connected to the power, it will display 00:00.

## Setting the Minute minder

The minute minder does not switch the oven off automatically. A minute minder duration time of between 1 minute and 99 minutes can be selected.

The clock is displayed as "h:mm".

1. Press the function key repeatedly until the minute minder symbol starts to flash.
2. While the minute minder symbol is flashing, use the plus and/or minus keys to set the required minute minder duration time.
3. About 7 seconds after the last press of the plus or minus key, the minute minder duration time is accepted and starts to count down.

## Check or modify the Minute minder

1. Press the function key repeatedly until the minute minder symbol starts flashing again and the remaining minute minder duration time is displayed.
2. While the minute minder symbol is flashing, you can press the plus and/or minus keys to adjust the minute minder duration time.

## Cancel the Minute minder

1. Adjusting the minute minder duration time down to zero would cancel the minute minder function.
2. About 7 seconds after the last press of the plus or minus key, the updated minute minder duration time is accepted and starts to count down.
3. When the minute minder duration time has elapsed, the buzzer will sound. Press the function key to silence the alarm and the display returns to showing the current time of day. If you do not silence the alarm, it will be silenced automatically after approximately 7 minutes.

## Manual operation of the oven

If the programmer is not in semi-automatic or fully-automatic mode you can use oven functions manually. The **Man** icon will appear on the display screen.

## Semi-automatic cooking

Semi-automatic cooking allows the main oven to switch off automatically after a specified time.

Note: Make sure that the correct time of day has been set on the timer.

1. Place the food in the main oven, and select the cooking function and temperature.
2. Press the function key repeatedly until the 'cooking duration' symbol  $\rightarrow$  starts to flash.
3. While the cooking duration time symbol is flashing, use the plus and/or minus keys to set the required cooking duration time. A duration time of between 1 minute and 23 hours 59 minutes can be set.
4. About 7 seconds after the last press of the plus or minus key, the cooking duration time is set and begins to count down. The 'Auto' symbol and 'Cookpot' symbol light up in the timer display.

## Check, modify or cancel the cooking duration time

1. If you need to check or change the cooking duration time, press the function key repeatedly until the cooking duration time symbol starts flashing again, and the remaining cooking duration time is displayed.
2. While the cooking duration time symbol is flashing, use the plus and/or minus keys to adjust the cooking duration time.
3. Adjusting the cooking duration time down to zero would cancel the semi-automatic cooking function.
4. About 7 seconds after the last press of the plus or minus key, the updated cooking duration time is set and begins to count down.

When the cooking duration time has elapsed, the buzzer sounds and the 'Man' icon starts to flash.

1. Turn the function knob and the thermostat knob back to the off position.
2. Press the function key once to silence the buzzer. If you do not silence the buzzer, it will be silenced automatically after about 7 minutes.
3. Press the function key again and the 'Man' symbol lights up steadily to show that the main oven is back in manual mode.

## Fully Automatic cooking

Fully-automatic cooking allows the main oven to switch on and off automatically. You can enter the 'cooking duration time' and the time at which you want the food to be ready, and the timer will calculate the start time.

Note: Make sure that the correct time of day has been set on the timer.

1. Place the food in the main oven.
2. Press the function key repeatedly until the cooking duration time symbol  $\rightarrow$  starts to flash.
3. While the cooking duration time symbol is flashing, use the plus and/or minus keys to set the required cooking duration time. A duration time of between 1 minute and 23 hours 59 minutes can be set.
4. About 7 seconds after the last press of the plus or minus key, the cooking duration time is set. The 'Auto' symbol and 'cookpot' symbol light up in the timer display.
5. Press the function key repeatedly until the 'cooking end time' symbol  $\rightarrow$  starts to flash.
6. While the cooking end time symbol is flashing, use the plus and/or minus keys to set the required cooking end time. A cooking end time can be selected up to 23 hours and 59 minutes after the 'current time of day'.
7. Select the cooking function and temperature as usual.

The 'Auto' symbol remains lit up, but the 'cookpot' symbol goes out, this indicates that the cooking start time has not yet been reached.

## Check, modify or cancel the cooking duration time

1. If you need to check, change or cancel the cooking duration time, press the function key repeatedly until the cooking duration time symbol starts flashing again, and the cooking duration time is displayed.
2. While the cooking duration time symbol is flashing, you can use the plus and/or minus keys to adjust the cooking duration time.

## **Check, modify or cancel the cooking end time**

1. If you need to check, change or cancel the cooking end time, press the function key repeatedly until the →| symbol starts flashing again, and the cooking end time is displayed.
2. While the cooking end time symbol is flashing, you can use the plus and/or minus keys to adjust the cooking end time.
3. About 7 seconds after the last press of the plus or minus key, the updated cooking duration time and/or cooking end time is set.

Adjusting both the cooking duration time down to zero and the cooking end time down to the 'current time of day', would cancel the fully-automatic cooking function.

When the calculated start time arrives, the oven heating is switched on and the 'cookpot' symbol appears in the timer display.

When the cooking end time arrives, the buzzer sounds. The 'Man' icon starts to flash.

1. Turn the function knob and the thermostat knob back to the off position.
2. Press the function key once to silence the buzzer. If you do not silence the buzzer, it will be silenced automatically after about 7 minutes.
3. Press the function key again and the 'Man' symbol lights up steadily to show that the main oven is back in manual mode.

## **Selecting the buzzer volume**

1. Press the function key repeatedly until 'L1', 'L2' or 'L3' appears on the timer display.
2. While 'L1', 'L2' or 'L3' appears on the display, use the plus and/or minus keys to adjust the buzzer volume, with L1 being the quietest tone and L3 being the loudest tone.
3. About 7 seconds after the last press of the plus or minus key, the selected buzzer volume is stored in the memory.

## **Activating and deactivating the child lock**

To activate the child-lock

1. While the timer is not being used to adjust any other function, press and hold the plus key for about 5 seconds until the padlock symbol appears in the display.
2. While the child-lock is active, pressing the timer keys has no effect.

Note: If a semi-automatic or fully-automatic cooking programme is currently in progress, the child lock function cannot be modified or cancelled and the cooking programme will run through to the end.

To de-activate the child-lock


1. While the timer is not being used to adjust any other function, press and hold the plus key for about 5 seconds until the padlock symbol disappears from the display.

## Soft Closing Door (If fitted)

The door can be paused at any angle greater than 30°.

The door will close slowly under the action of the damper, if it is less than or equal to an angle of 30°.

Please do not close the door vigorously.

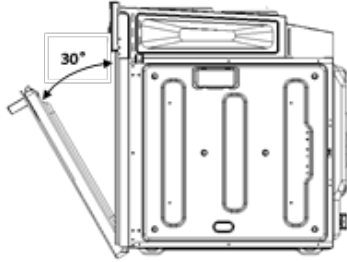

## Catalytic Oven liners (If fitted)

Some oven specifications have catalytic oven liners fitted to the sides of the oven, you can easily tell if they are fitted because the panel is a light grey soft touch enamel. This enamel is special and partly cleans itself. This does not stop all marks on the lining, but helps to reduce the amount of manual cleaning needed.


These panels work best when the oven is heated above 200°C. If you do most of your cooking below this temperature, occasionally wipe the panels with a lint free cloth and hot soapy water. The panels should then be allowed to dry naturally and the oven heated at 200°C for about one hour. This will make sure that the panels are working effectively.

Do not use harsh abrasives or chemicals on this soft enamel.

# Removing the appliance door

---


1. Open the appliance door fully.
2. Fold open the two locking levers on the left and right
3. Close the appliance door as far as the limit stop.
4. With both hands, grip the door on the left- and right-hand side, and pull it out upwards.

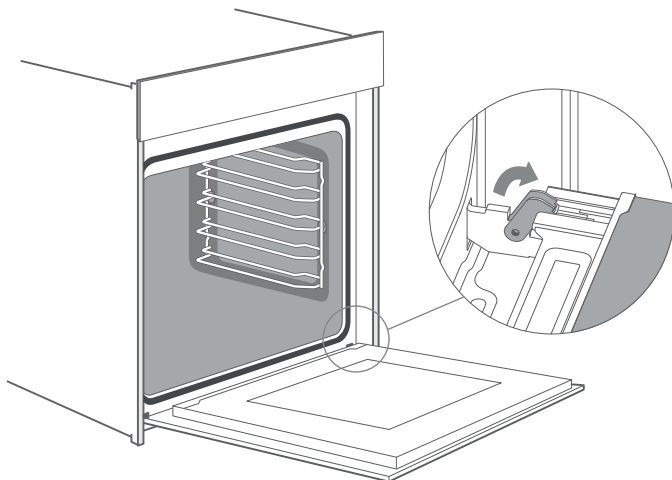

## Fitting the appliance door

Reattach the appliance door in the opposite sequence to removal.

1. When attaching the appliance door, ensure that both hinges are placed right onto the installing holes of the front panel of the cavity.  
Ensure that the hinges are inserted into the correct position. You must be able to insert them easily and without resistance. If you can feel any resistance, check that the hinges are inserted into the holes right.
2. Open the appliance door fully. While opening the appliance door, you can make another check if the hinges are onto the right position. If you make the fitting wrong, you will not be able to make the appliance door fully opened.  
Fold both locking levers closed again.
3. Close the cooking compartment door. By the same time, we warmly recommend you to check one more time, if the door is onto the right position and if the ventilation slots are not half-sealed.

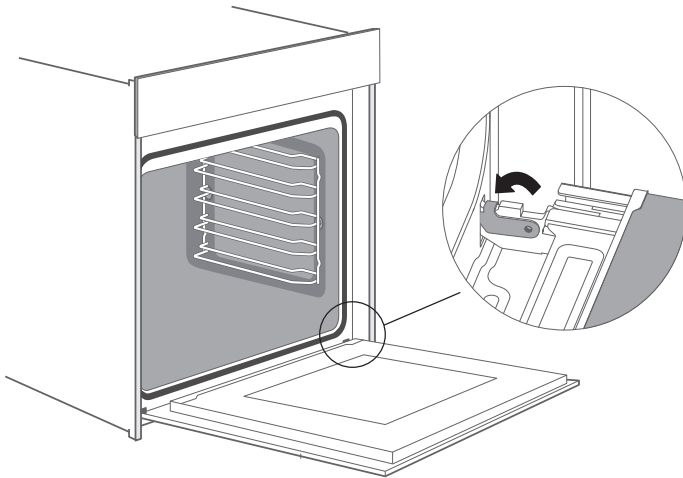


### Removing the door cover

The plastic inlay in the door cover may become discolored. To carry out thorough cleaning, you can remove the cover.

Remove the appliance door like instructed above.

1. Press on the right and left side of the cover.
2. Remove the cover.
3. After removing the door cover , that rest parts of the appliance door can be easily taken **off** so that you can go on with the cleaning . When the cleaning of the appliance door has finished , put the cover back in place and press on it until it clicks audibly into place.
4. Fitting the appliance door and close it.

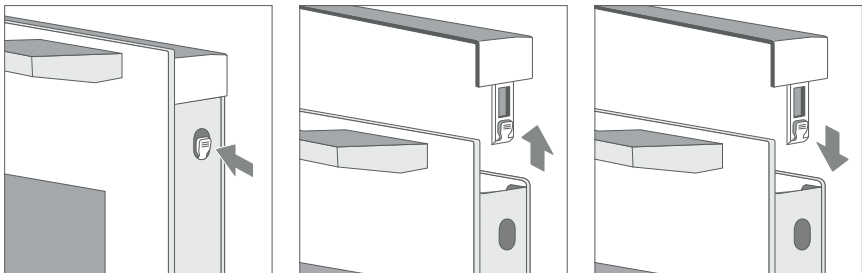

### Caution!

While the appliance door is well installed, the door cover can also be taken off, by this time.


1. Removing the door cover means to set the inner glass of the appliance door free, the glass can be easily moved and cause damage or injury.
2. As removing the door cover and inner glass means to reduce the overall weight of the appliance door. The hinges can be easier to be moved when closing the door and you may be trapped. Keep your hands away from the hinges.

Because of the 2 points above, we strongly recommend you not to remove the door cover unless the appliance door removed. Damage caused by incorrect operation is not covered under warranty.

### Rails

When you want to have a good cleaning for the rails and cavity, you can remove the shelves and clean them. In this way your appliance will retain its appearance and remain fully functional for a long time.

1. Pull the front part of the side rails horizontally to the opposite direction until the feature ❶ gets out ; Later on you can remove the shelves out like the picture below.
2. To put the side rails back to the cavity, to make the back part of the shelves insert into the holes of cavity rightly first of all , then insert the feature ❶ back into the cavity.

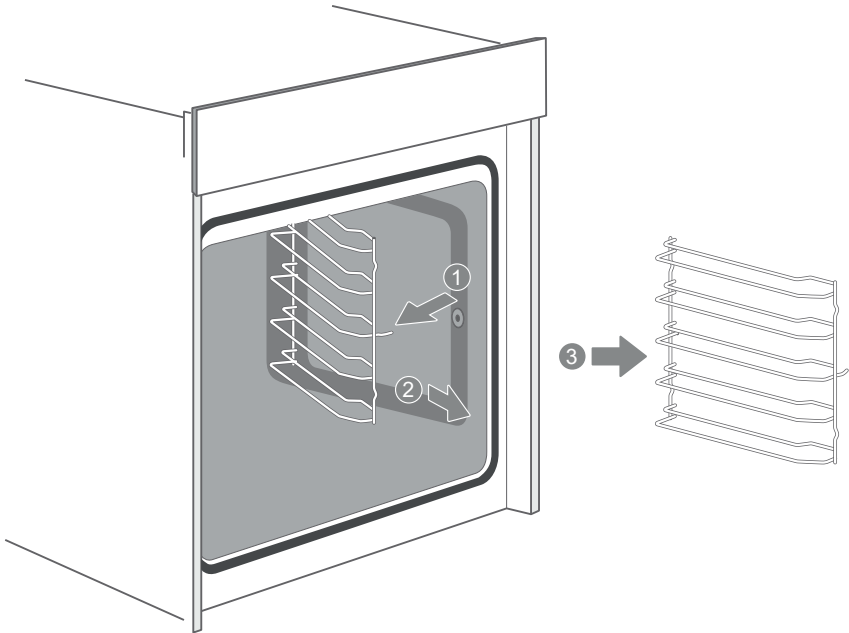




## APPLIANCE DOOR

---

With good care and cleaning, your appliance will retain its appearance and remain fully functional for a long time to come. This will tell you how to remove the appliance door and clean it. For cleaning purposes and to remove the door panels, you can detach the appliance door. The appliance door hinges each have a locking lever.

When the locking levers are closed, the appliance door is secured in place. It cannot be detached. When the locking levers are open in order to detach the appliance door, the hinges are locked. They cannot snap shut.

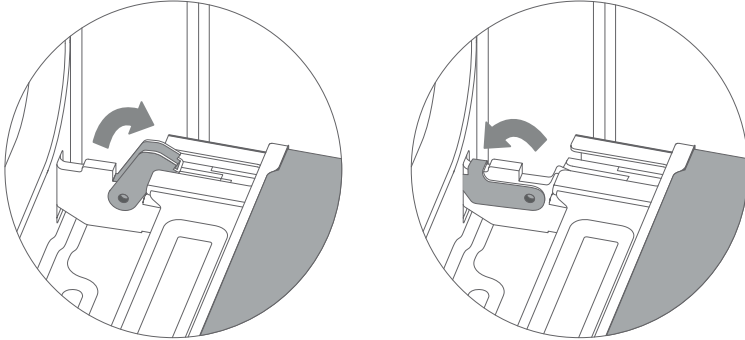


### **Warning – Risk of injury!**

1. If the hinges are not locked, they can snap shut with great force. Ensure that the locking levers are always fully closed or, when detaching the appliance door, fully open.
2. The hinges on the appliance door move when opening and closing the door, and you may be trapped. Keep your hands away from the hinges.


## Accessories

---


Wire shelf: For dishes, cake pan with items for roasting and baking.

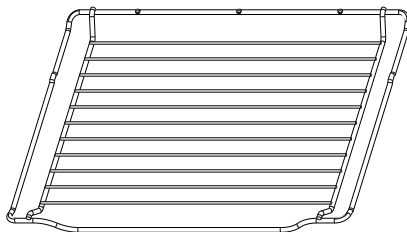

Shelf support rails: Used to support the wire shelf and grill pan if required. These shelf support rails on the right and left sides of the oven can be removed.

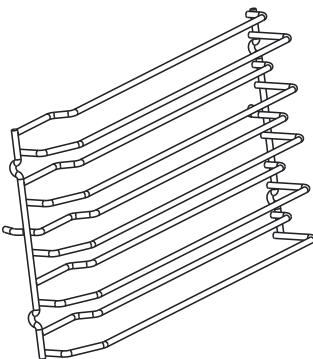

Grill pan: For cooking large quantities of food such as moist cakes, pastries, frozen food etc, or for collecting fat/ spillage and meat juices. This can also be used as a roasting tin and a baking sheet.

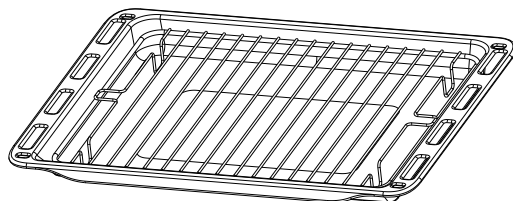


## Shelf placement warning:


To ensure the oven shelves operate safely, correct placement of the shelves between the side rails is imperative. Shelves and the grill pan can only be used between the first and fifth layers on the main oven and first and third layers on the top oven.

Ensure that shelves are inserted correctly, with the upstand at the back and pointing upwards. This will help to prevent the shelves tipping forwards when they are pulled out.

Top oven shelf positions

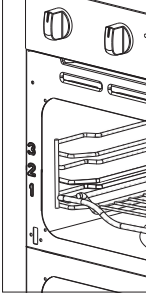


Main oven shelf positions

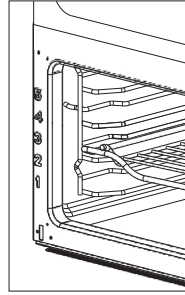


## Removing Shelf Runners


1

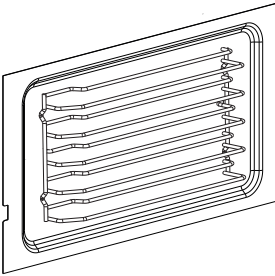


2

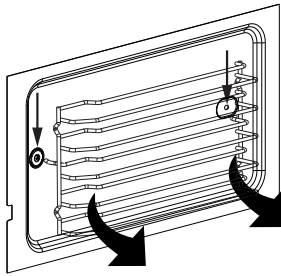

3

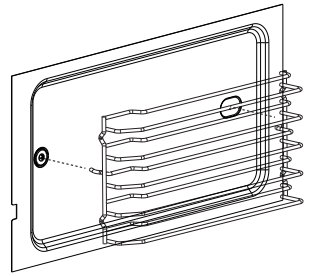

## Standard shelves

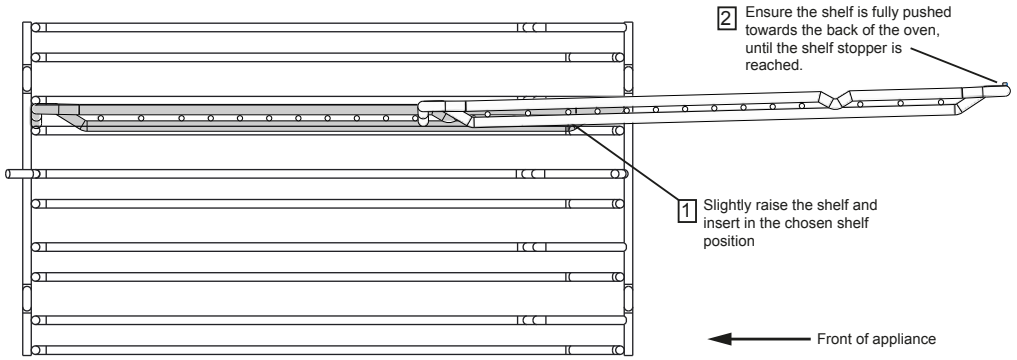

## BULB REPLACEMENT

### Risk of electric shock!


### Glass cover

You must replace a damaged glass cover. Suitable glass covers may be obtained from the after-sales service.

For replacement, proceed as follows:

1. Disconnect power from the mains outlet or switch off the circuit breaker of the unit's mains outlet.
2. Unscrew the glass lamp cover by turning it counter-clockwise (note, it may be stiff) and replace the bulb with a new one of the same type.
3. Screw the glass lamp cover back in place.

Note: Only use 25-40W/220V-240V, T300°C halogen lamps

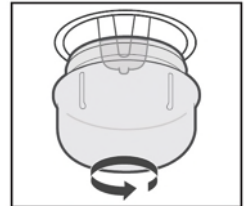

# Maintaining your appliance

Area Appliance exterior	Cleaning
Appliance exterior Stainless steel front	<p><b>Hot soapy water:</b> Clean with a dish cloth and then dry with a soft cloth. Remove flecks of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under such flecks. Special stainless steel cleaning products suitable for hot surfaces are available from our after-sales service or from specialist retailers. Apply a very thin layer of the cleaning product with a soft cloth.</p>
Plastic	<p><b>Hot soapy water:</b> Clean with a dish cloth and then dry with a soft cloth. Do not use glass cleaner or a glass scraper.</p>
Painted surfaces	<p><b>Hot soapy water:</b> Clean with a dish cloth and then dry with a soft cloth.</p>
Control panel	<p><b>Hot soapy water:</b> Clean with a dish cloth and then dry with a soft cloth. Do not use glass cleaner or a glass scraper.</p>
Door panels	<p><b>Hot soapy water:</b> Clean with a dish cloth and then dry with a soft cloth. Do not use a glass scraper or a stainless steel scouring pad.</p>
Door handle	<p><b>Hot soapy water:</b> Clean with a dish cloth and then dry with a soft cloth. If descaler comes into contact with the door handle, wipe it off immediately. Otherwise, any stains will not be able to be removed.</p>
Enamel surfaces and self-cleaning surfaces	<p>Observe the instructions for the surfaces of the cooking compartment that follow the table.</p>
Glass cover for the interior lighting	<p><b>Hot soapy water:</b> Clean with a dish cloth and then dry with a soft cloth. If the cooking compartment is heavily soiled, use oven cleaner.</p>
Door seal Do not remove	<p><b>Hot soapy water:</b> Clean with a dish cloth. Do not scour.</p>

# HEALTH

---

Area Appliance exterior	Cleaning
Stainless steel door cover	<b>Stainless steel cleaner:</b> Observe the manufacturer's instructions. Do not use stainless steel care products. Remove the door cover for cleaning.
Accessories	<b>Hot soapy water:</b> Soak and clean with a dish cloth or brush. If there are heavy deposits of dirt, use a stainless steel scouring pad.
Rails	<b>Hot soapy water:</b> Soak and clean with a dish cloth or brush.

## Notes :

1. Slight differences in color on the front of the appliance are caused by the use of different materials, such as glass, plastic and metal.
2. Shadows on the door panels, which look like streaks, are caused by reflections made by the interior lighting.
3. Enamel is baked on at very high temperatures. This can cause some slight color variation. This is normal and does not affect operation. The edges of thin trays cannot be completely enameled. As a result, these edges can be rough. This does not impair the anti-corrosion protection.
4. Always keep the appliance clean and remove dirt immediately so that stubborn deposits of dirt do not build up.

## Tips

1. Clean the cooking compartment after each use. This will ensure that dirt cannot be baked on.
2. Always remove flecks of lime scale, grease, starch and albumin (e.g. egg white) immediately.
3. Remove flecks of food with sugar content immediately, if possible, when the fleck is still warm.
4. Use suitable overware for roasting, e.g. a roasting dish.

Please keep this handbook for future reference, or for anyone else  
who may use the appliance.

## TECHNICAL DATA

---

### Electric Built In

Electrical supply / Load		
Appliance Size (cm)	Electrical supply	Load (kW)
90cm Multifunction	220 - 240V ~ 50Hz-60Hz	5.1

For the specific power rating of your model, refer to the data badge on the front frame of your appliance.

**WARNING:** This appliance must be earthed.



The measurement and calculation method of the above table was done in accordance with commission regulation (EU) No 65/2014 & 66/2014.

-	Symbol	Value	Unit
Model identification	-	BEL BI903MFC	-
Type of oven	-	Built-in electric oven	-
Mass of appliance	-	49.9	kg
Number of cavities	-	2	-
Heat source per cavity (electricity or gas)	Electricity	-	-
Top cavity			
Volume per cavity	V	38	L
Energy consumption (electricity) required to heat a standardised load in a cavity of an electric heated oven during a cycle in conventional mode per cavity (electric final energy)	EC electric cavity	0.71	kWh/cycle
Energy consumption required to heat a standardised load in a cavity of an electric heated oven during a cycle in fan-forced mode per cavity (electric final energy)	EC electric cavity	/	kWh/cycle
Energy Efficiency Index per cavity	EEl cavity	96.7	-
Energy efficiency class	-	A	-
Main cavity			
Volume per cavity	V	72	L
Energy consumption (electricity) required to heat a standardised load in a cavity of an electric heated oven during a cycle in conventional mode per cavity (electric final energy)	EC electric cavity	/	kWh/cycle
Energy consumption required to heat a standardised load in a cavity of an electric heated oven during a cycle in fan-forced mode per cavity (electric final energy)	EC electric cavity	0.81	kWh/cycle
Energy Efficiency Index per cavity	EEl cavity	91.4	-
Energy efficiency class	-	A	-
1kWh/cycle= 3.6MJ/cycle			

**Oven energy saving tips:**

Cook meals together, if possible.

Keep the pre-heating time short.

Do not lengthen cooking time.

Do not open the oven door during the cooking period.

Do not forget to turn the appliance off at the end of cooking.

## Customer Care

Please keep this handbook in a safe place as the information inside may be of use should you sell, or pass on the appliance. Please fill in the model number and serial number in the spaces provided below as they will assist us should you need to call.

# 0344 815 3746

When you dial this number, you will hear a recorded message and be given several options. This indicates that your call has been accepted and is being held in a queue. Calls are answered in strict rotation as our Customer Care representatives become available.

Enter appliance numbers here for future reference:

<b>Model No</b>									
4	4	4							
<b>Serial No</b>									

These numbers can be found on your appliances data badge. Outside the UK and Northern Ireland, refer to your local supplier.



Stoney Lane, Prescot, Merseyside, L35 2XW.

