

Baby Belling

120R Mk 6

Installation and User Instructions



Installing your cooker

Your Belling Cooker

Even if you have used an electric cooker before, it is important that you read these instructions thoroughly before starting to cook, paying particular attention to the installation and safety instructions.

Getting help

If you have any problems with installing, operating, or cooking with your Belling Cooker, please check through these instructions thoroughly to make sure that you have not missed anything. If you still need help, then please contact (including a daytime telephone number if possible):

Customer Help Line
Belling Appliances Ltd
Mexborough,
South Yorkshire,
S64 8AJ
Tel : 0709 579902

If your query relates to cooking then please write to the Senior Home Economist at the same address.

Details of how to contact a Belling Approved Service Agent, should your cooker ever require maintenance, can be found in the 'Care of your cooker' section of this book. Please quote the cooker model and serial number with all enquiries. This can be found on the voltage label on the oven frame.

WARNING! For your own safety, make sure that these instructions on installation, use and maintenance are followed.

We advise you to keep these instructions in a safe place for future reference. If you sell or transfer ownership of this product, please pass on these instructions to the new owner.

Unpacking

After unpacking your cooker, make sure that you remove all the packing from the oven and grill compartment, and the packing from under the hob on radiant ring models, and any stickers from the oven door and the hob. Remove the splashback which is fitted to the underside of the cooker and fit as per instructions. Examine your cooker for any damage. If there is any damage to your cooker or anything is missing, please contact your supplier for advice.

Locating the cooker

Your cooker must stand on a flat surface, or be fitted to the special Belling stand, so that when it is in position the hob is level. Make sure that the cooker is stable and cannot be rocked. If it is used between units, allow 10mm (3/8") clearance on each side. It must not be situated with either side closer than 150mm (6") to a wall or cupboard that is higher than the hob. Do not remove the cooker feet.

Any overhanging surface or cooker hood should be at least 450mm (18") above the cooker hob. We do not recommend positioning the cooker below wall cupboards, as the heat and steam from the cooker may cause damage to the cupboards and its contents. Make sure that the walls near the cooker are resistant to heat, steam, and condensation.

Fitting the splashback

If you use your cooker with its back to a wall you must use the splashback to protect the wall from any heat damage. Simply slot the splashback between the flanges at the back of the cooker.

Installing your cooker

Connecting the cooker

WARNING - THIS APPLIANCE MUST BE EARTHED

The Baby Belling 120 is designed to operate from a 13A socket outlet. If the cooker is not already fitted with a plug proceed as follows:

IMPORTANT:

The cooker must be connected to the supply by a properly earthed 3-pin plug (minimum capacity 13 Amp). If a BS1363 fused plug is used it should be fitted with a 13 Amp fuse ASTA or BSI approved to BS1362.

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow	Earth
Blue	Neutral
Brown	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows:

1. The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol \perp or coloured green, or green and yellow.
2. The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.
3. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

If you are not sure how to connect your cooker please consult a competent electrician.

Warning!

The cooker may already be fitted with a non-rewirable plug. If this is not of the correct type for the sockets in your home it must be cut off and the correct type fitted. If it is cut off it must be disposed of safely. There is a danger of electric shock if it is inserted into a socket.

To replace the fuse in a non-rewirable plug, simply prise out the fuse carrier, fit an appropriate replacement fuse, (13 Amp, ASTA or BSI approved to BS1362) and replace the fuse carrier. Never use the plug without the fuse carrier fitted. If the fuse carrier is lost, a replacement can be obtained from your nearest Belling Spares Distributor, or most Electricity Company shops. The replacement fuse carrier will be identified by either colour coding to match the plug, or by markings on the fuse carrier and the plug. Make sure that a correct replacement is fitted.

This appliance has been approved by the British Electrotechnical Approvals Board to the latest European safety standards.

FOR YOUR OWN SAFETY

When used properly your Baby Belling Cooker is completely safe, but as with any electrical appliance there are some precautions you must take in its use.

Never ...

- ..allow anyone except an authorised Belling Service Agent to service or repair your cooker
- ..remove any part of the cooker other than those intended in normal use, or attempt to modify the cooker in any way.
- ..use the cooker for commercial catering. It is designed for domestic use and for cooking food only.
- ..allow young children to operate or play with the cooker.
- ..use a chip pan or deep fat fryer more than 1/3 full of oil, or use a lid while frying, and do not leave a fryer unattended while cooking.
- ..operate the grill with the oven door closed. This may cause overheating of the cooker.
- ..line the shelf, floor, or sides of the oven, or the radiant ring hob spillage tray with aluminium foil as overheating and damage may result.
- ..place anything which might catch fire, such as towels or tea towels, on the hob or elements, even when the cooker is not in use.
- ..use an asbestos mat, trivet or rack of any kind under pans on the hob.
- ..store anything which might catch fire in the oven.


Always ...

- ..take care when touching any part of the cooker which may be hot. Use oven gloves when removing or replacing food or dishes.
- ..stand back when opening the oven door to allow any build-up of heat or steam to disperse.
- ..keep the oven door closed when not in use to prevent accidents, but remember that the oven door must be kept open when grilling to prevent overheating.
- ..make sure that the roof, floor, and shelf are fitted correctly before using the oven or grill.
- ..keep your cooker clean, as a build-up of grease or fat from cooking may be a fire hazard.
- ..switch off at the mains supply before cleaning your cooker.
- ..supervise children and pets, particularly when grilling, as exposed parts of the grill may become hot.
- ..use suitable pans for the hob, and make sure that they are stable.
- ..keep handles away from the edge of the hob and any heat. For added safety you should consider using a suitable hob guard.
- ..make sure that all the controls are switched off when you finish cooking.
- ..remember that your cooker may stay hot for a time even after you have finished cooking.

Before Cooking

Before you cook for the first time, we recommend that you switch on each element in turn to burn off any odours remaining from manufacture. Simply operate each hob element and the grill on maximum for a few minutes, and the oven for about 30 minutes.

Controls

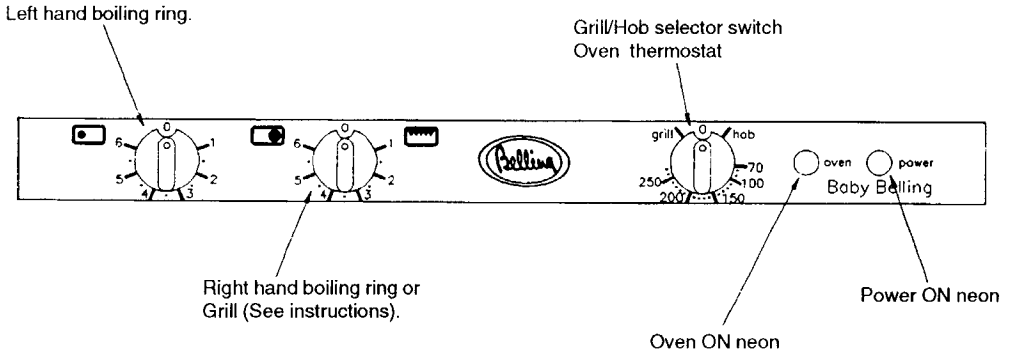

Power on

This lights up to show that the cooker is switched on at the mains, even if it is not being used.

Oven + selector

To allow the Baby Belling 120 to operate from a 13 amp socket, the electrical load of the cooker is limited by the selector switch. The right hand hob element is switched off whenever the oven or grill are selected for use.

O This is the 'off' position. When this is selected only the left hand hotplate can be used.

grill This is the grill position. When this is selected only the grill and left hand hotplate can be used.

hob This is the right hand hob position. When this is selected both of the hotplates can be used.

NOTE: The grill and right hand hob are operated by the same control depending on which is selected on the selector switch.

Continuing to turn the selector switch will operate the oven, with the left hand hotplate also available if required.

Using the hob

Select the hob position on the selector switch to use both hotplates. Only the left hand hotplate will operate if you are using the grill or oven at the same time.

The hotplate controls can be operated by turning them in either direction until the desired setting is against the indicator by the control - '0' for off, between 1 and 3 for low simmering, and between 4 and 6 for fast simmering and boiling. Remember that the controls may also be set to any position between the numbers on the dial. We recommend that pans are brought to the boil on setting 6 (maximum) and then the heat reduced as necessary.

Using the grill

The grill/oven roof should be removed regularly for cleaning, but must always be replaced before the grill or oven is used. A dirty grill roof can cause the grill to smoke when it is used. When grilling, the oven door must be fully open to prevent overheating.

Controls

- Oven/grill pan and grid** To obtain the best results, always use the wire grid when grilling. This will ensure that foods do not cook in their own fats and will prevent any distortion of the grill pan. It can be used either way up to position the food nearer to or further away from the grill element. The grill pan is usually used in the middle position in the oven for grilling. To avoid burning or excessive smoking and spitting, make sure that the food is not too close to the grill element. Always use an oven glove when replacing the grill pan.
- Grill control** Select the grill position on the selector switch. Only the grill and the left hand hob element will operate with the selector switch in this position.
- The grill control can be operated by turning it in either direction until the desired setting is against the indicator by the control - '0' for off, and between 1 (gentle heat) and 6 (full power). Remember that the control may also be set to any position between the numbers on the dial.
- We recommend that the grill is preheated for at least five minutes on setting 6 before placing the food under the grill. After sealing the surface of the food reduce the heat as required. Remember to keep the oven door open when grilling or preheating.
- Using the oven** Never operate the oven without the grill/oven roof and the oven floor in position. Make sure that the oven shelves are pushed fully in to the oven before closing the oven door, and close the door gently. In some conditions steaming around the oven door may occur. This is perfectly normal and does not indicate any fault with the oven door or seal. Do not place heavy loads on the oven door when it is open.
- Oven shelf** The three runner positions and shelf give a variety of cooking positions in the oven. The shelf is cranked, and can be used either way up to give intermediate heights. The recipe book suggests the best positions for cooking in the oven. For example, 'top shelf down' refers to a shelf used on the top runner position with the shelf downwards. Do not place food or empty dishes on the floor of the oven during cooking. The shelf simply slides in and out. Be careful, when pulling the shelf out with food on it, that you do not pull it out too far.
- Oven pans** To obtain the best results make sure that any pans or baking sheets that you may use have a gap of at least 25mm (1") around them in the oven.
- When cooking food which might boil over, place the dish on a tray or larger dish on the shelf to catch spillage. Do not line any part of the oven, including the floor, with aluminium foil as this can cause damage. You can, of course, use foil to cover foods during cooking.
- Oven control** The control is marked in 10°C intervals. Turn it in either direction until the desired temperature is set. The neon indicator will stay alight until the desired temperature is reached, (approximately 20 minutes depending on the selected temperature), when it will go out. The neon indicator will then continue to go on and off as the thermostat maintains the oven temperature automatically.

Care of your cooker

In the interests of both safety and hygiene your Belling Cooker needs to be kept clean. A build-up of grease or fat from cooking could cause a fire hazard.

WARNING! For your own safety, always switch off your cooker at the mains supply before cleaning.

Never use excessive amounts of water to clean your cooker, and remember that your cooker is heavy - take care when pulling it out for access.

Cooker exterior

The outside surfaces of your cooker should be cleaned with a mild detergent or mild cream cleanser and a little water. Wipe off the detergent with a damp cloth and dry the cooker with a soft lint-free cloth.

Do not use scouring pads or abrasive detergents, particularly on the control panel, as damage may result.

Radiant hob

Any spillage on the hob will run through to the spillage tray underneath the elements. To prevent any spillage becoming baked on, clean the hob and the spillage tray as soon as the hob has cooled, using a mild detergent or mild cream cleanser and a little water.

The hob is hinged at the back to allow access to the spillage tray. Simply lift the front of the hob, after removing the splashback if necessary.

Oven and grill

The oven shelf, oven roof, oven floor, and enamel parts of the oven can be cleaned using household cream cleanser with a nylon pad or sponge. Heavier soiling may require the use of a proprietary oven cleaner or steel wool pad, but do not allow these to contact the door seals or plastic parts of the cooker.

Only use oven cleaners which carry the Vitreous Enamel Development Council's Approvals symbol, and always follow the manufacturers instructions for use.



To remove the oven roof or oven floor, simply slide it forward out of the oven. Remember never to operate either the oven or grill without the roof and floor in position. When replacing the floor and the roof make sure that they are correctly located in their guides.

Suitable pans

To get the best results when cooking on the hob, it is important to use the correct size and type of pans. Using unsuitable pans can cause overheating of the hob, slow and inefficient cooking, and poor cooking results.

The pans should be approximately the same diameter as the hotplate. Using too small a pan may result in boiling over and it wastes heat, but never use pans with a base larger than 250mm (10") in diameter. Too large a pan can cause overheating and may damage the hob enamel. Never use a pan that covers two rings, such as a large fish kettle.

The base of the pan needs to make good contact with the hotplate, to allow maximum heat transfer. For this reason, use pans with a flat base - not bowed or ridged, or with a rim (like some kettles). A new pan may not necessarily be flat. You can check by holding a straight edge such as a ruler against the bottom of the pan. The ruler should touch all the way across, with only a small gap allowed. Scrolled base pans (ground like a spiral) should be suitable.

For best results use the larger ring for frying and deep frying. Always use a good quality pan and never fill a chip pan more than one third full of oil. Never leave any frying unattended, even for a short time. If you use a wok, make sure it is flat-bottomed. Never use a stand or rack of any kind under any pan on the hob. To avoid damage to the hotplates, make sure that the base of any pan is smooth, and always lift pans off the hob rather than dragging them. You must never cook any item of food directly on the hotplates as it is dangerous and damage to the cooker can result.

Service

Calling for Service

Please consult your retailer in the first instance. If you experience difficulty contact Belling Appliances, After Sales Division. Remember that you may be charged for the visit (even during the guarantee period) if nothing is found to be wrong with the appliance, so always check the instructions to make sure that you have not missed anything.

Belling Appliances Service Division :
Tel: 0345 454540 (all calls will be charged at local rate).

Before contacting a service agent, please note the following details about your cooker :

Model Number

Serial Number

Date of purchase

It will also help if you know your postcode.

In order to provide a complete service history for your Belling appliance, please ask the service engineer to record the appropriate details in the chart below.

Date	Nature of Fault	Parts Replaced or Repaired	Authorised Stamp or Signature

Technical data

Power supply - 240V or 220V/50Hz single phase as marked on the voltage label.

Nominal dimensions (mm)

120R -394 high (495 with splashback) x 470 wide x 420 deep (weight 23kg)

Electrical load

Left hotplate 1.0kW

Right hotplate 1.8kw

Grill 1.5kw

Oven 1.2kw

maximum load 2.8kw

This cooker is classed as type X in respect of surface temperatures of adjacent surfaces. Please see installation instructions for further details.