

S T O V E S

ST IWD8614

Built-In Washer dryer

User Manual

Contents

Safety Warnings.....	3
Unpacking	6
Installing Your Washer dryer	7
Moving and Installing	8
Product Overview.....	13
Preparation	15
Before First Use.....	17
Wash Setting	17
Important Information.....	23
Maintenance – Cleaning the Washer dryer	24
Specifications.....	26
Product Fiche	27

Safety Warnings

For your continued safety and to reduce the risk of injury or electric shock, please follow all the safety precautions listed below.

WARNING!

- If you will not be using the washer dryer for a while such as when you go on holiday, disconnect the plug from the mains supply and turn off the water supply to the washer dryer . This is particularly important if there is no drainage around the washer dryer .
- If the water supply is left on, water pressure may build up and cause a leak.

General Use

- Transit bolts are used to transport the washer dryer . You should remove these using a spanner or similar tool before you install the washer dryer . If you do not, it will cause strong vibrations when the washer dryer is spinning.
- Do not install your washer dryer anywhere that is damp or exposed to the weather. If you do, it may cause an electric shock, fire, failure or deterioration.
- Do not pour water directly onto any part of the washer dryer . It may cause a short circuit or electric shock.
- Keep burning objects such as candles or cigarettes, away from the washer dryer . They may cause a fire or damage.
- Keep flammable substances well away from the washer dryer – for example kerosene, gasoline, benzene, paint thinner and alcohol, or clothing soaked with these. They may cause an explosion or a fire.
- This washer dryer is only suitable for washing textiles labelled 'washer dryer washable'.
- Do not connect the washer dryer to hot water. The washer dryer works with cold water only.
- Before you start using the washer dryer , turn the tap on to check that the hose is properly connected. If it's not, there may be a water leak.
- Do not put too much laundry or detergent into the washer dryer . It may cause issues with the washer dryer or laundry.
- Be careful not to get your laundry caught in the door when you close it. This could cause a water leak or damage your laundry.
- This washer dryer is for household (domestic) use only.

Power Source and Cable

- Use an independent household dedicated mains socket, rated at 10 Amp 220V to 240V AC. If the washer dryer is plugged in with other appliances, it may overheat and cause a fire.
- Make sure the mains plug is pushed firmly into the socket. A loose connection may overheat and cause electrical shock or a fire.
- Check the mains lead and mains plug for any damage. If the mains cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Unplug the mains lead when cleaning the washer dryer.
- Do not touch the mains lead or mains plug with wet hands. It may cause an electric shock.
- Check the mains plug regularly for dirt. If dirt accumulates on the mains plug, it could cause a fire. To prevent this, unplug the cable and clean the mains plug with a dry rag.
- If you disconnect the mains plug, hold onto the mains plug not the cable. Pulling the cable may cause an electric shock or a fire.
- Do not use a mains plug adapter or extension cable. It may overheat and cause a fire.
- Make sure your home voltage matches the voltage displayed on the washer dryer. If you are not sure, contact an electrician.
- The mains plug must remain accessible to allow disconnection of the appliance after installation, or an all pole switch must be incorporated in the fixed wiring in accordance with the wiring regulations.

To Prevent Injury / Damage


- Do not climb on the washer dryer. You may hurt yourself or damage the washer dryer.
- When opening and closing the door ensure you keep fingers away from the door hinge, or this could lead to injury.
- Check your washing for objects such as nails, pins, coins, clips etc. They could damage your laundry or the washer dryer.
- To prevent any large, heavy objects (e.g., buckles, large buttons, etc.) from hitting the glass door, turn your clothing inside out or remove the heavy objects. They could damage your laundry or the washer dryer.
- Do not wash, rinse or spin water-proof sheets or clothing. These may cause vibration or washer dryer failure during spin-drying, which could lead to injury, damage to the washer dryer or damage due to water leaking.

- Be careful when draining hot water or any detergent from the drum.
- Do not dismantle, repair or modify the washer dryer . The washer dryer could malfunction and cause a fire or injury.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Do not touch the laundry inside the washer dryer , until the drum has completely stopped. Even if the drum is spinning at low speed it can cause an injury. Take particular care of children in this respect.
- The appliance is to be connected to the water mains using the new hose-set supplied. Old hose-sets should not be reused.
- The ventilation openings in the base of the washer dryer must not be obstructed by a carpet.


Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:

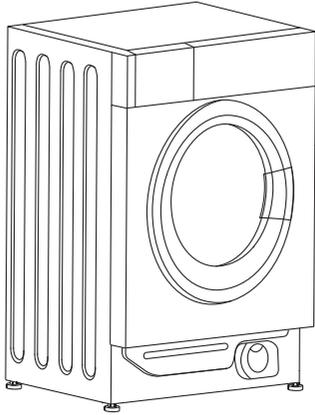

The Main Unit

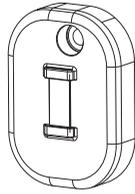

Magnet x 2

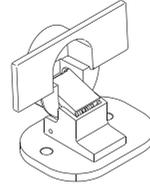


Hinge x 2




Screw A x 8




Screw B x 6

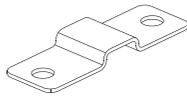

Spacer x 2

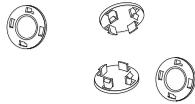

Transport Bolt Cover x 4

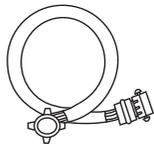

Water Supply Hose



Door Drill Template

Installing Your Washer Dryer

Choosing the Right Location for Your Washer Dryer

- Make sure there's enough space for your washer dryer.
- Install your washer dryer on a flat, stable surface to avoid excessive vibrations and noise.
- Don't install your washer dryer in direct sunlight or in a place where temperatures can reach freezing.


Removing the Transit Bolts

Four transit bolts keep the interior of the washer dryer in place while it's being moved.

They need to be removed before installation. Use a spanner (not supplied) and follow the instructions detailed below.

To remove the transit bolts:

1. Use a spanner to loosen the four bolts. They are located at the rear of the washer dryer.
2. Pull the bolts out horizontally. Make sure the entire bolt is removed.
3. Push the four cover caps (included with your accessories) into the respective bolt holes.

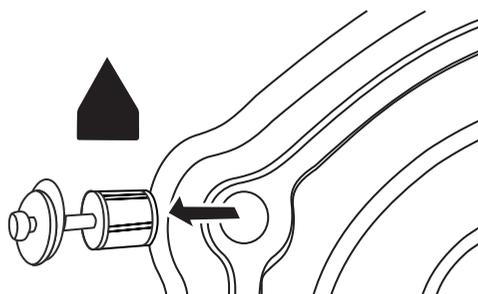



Moving the Washer Dryer from One Location to Another

Before you move the washer dryer :

- Shut off the tap and run the washer dryer to drain the water. Drain any remaining water from the pump hose.
- Disconnect the mains cable.
- Attach the transit bolts.

Moving and Installing


Hose and Cable Lengths

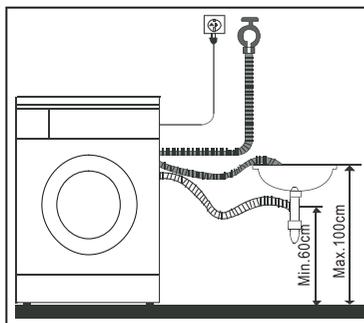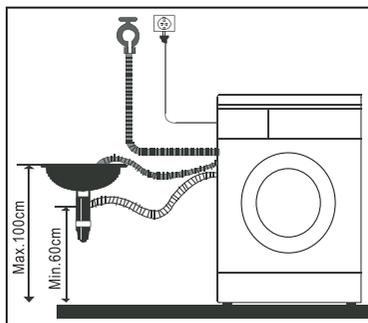

Levelling the Washer Dryer

There are levelling feet on the underside. They must be adjusted to make sure the washer dryer is level.

1. On each foot, loosen the lock ring by turning it clockwise.
2. Adjust all feet by rotating each upwards or downwards.
3. Use a spirit level to ensure the washer dryer is level.
4. Tighten each lock ring by turning them anti-clockwise (towards the washer dryer body).

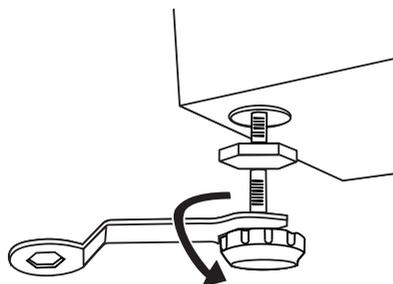

Ensure all lock rings are tightened securely. Check that the feet are still bolted to the washer dryer - if they're unbolted, the washer dryer will move around.



Water Supply Hose

Points to remember

- Follow the instructions in this section to avoid water leaks.
- Don't connect the hose to a combination tap.
- Don't twist, squash, modify or cut the hose.
- This machine is designed to connect to the cold water supply. Do **not** connect to the hot water supply.
- Use only the new water supply hose supplied. Old hose sets should not be reused.

Connecting the Water Supply Hose

1. To prevent leakage from the connection joints, ensure the rubber washer seals are fitted to each end of the water supply hose. Do not use without the seals in place.
2. Fit the straight end of the water supply hose to the cold water tap.
3. Connect the angled end of the white headed hose to the water inlet valve on the machine. Hand tighten the plastic parts of the connections. If you are unsure, please call a qualified plumber for safer connections.
4. Open the tap slowly and check that there are no leaks around the connection joints.

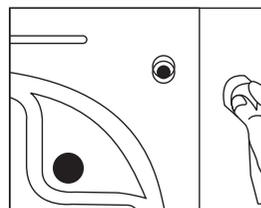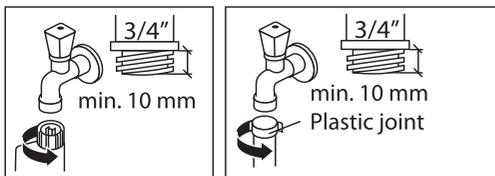


Water Drain Hose

Points to remember:


- Don't twist, pull out or bend the drain hose.
- Your washer dryer should be no more than 85cm from the drain outlet.
- The water drain hose should be mounted at a height of minimum 60 cm, maximum 100 cm from the ground.

Installing into Kitchen Furniture


This appliance is designed to be built into kitchen furniture. Follow the measurement below for correct installation.

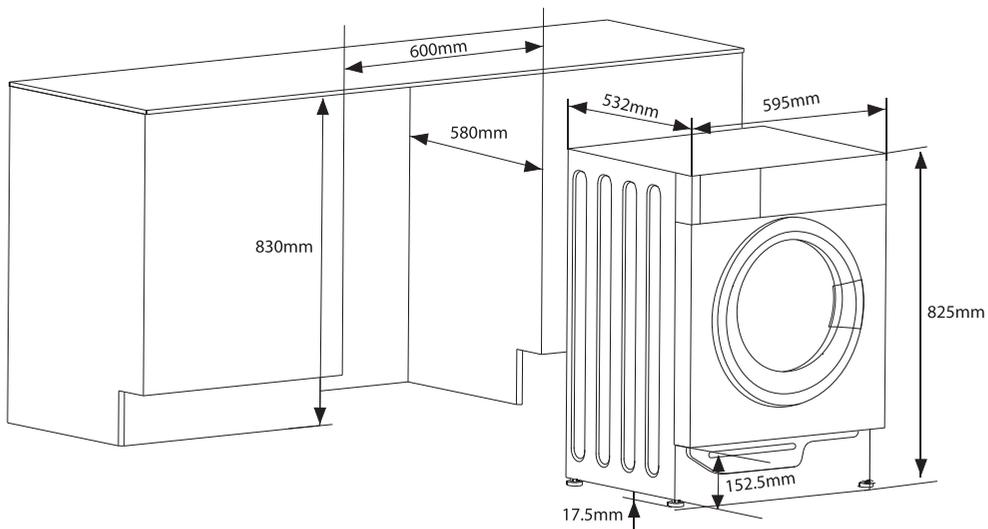

This appliance is also designed for the assembled cabinet door (16-22 mm thick) to open from the left or right.

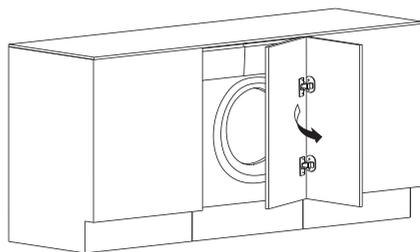


Door open from left to right

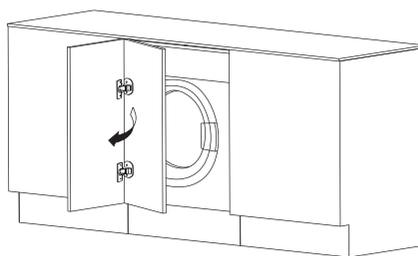


Door open from right to left


1. Mark on the cabinet door the measurement and dimension of the cupboard and washer dryer.

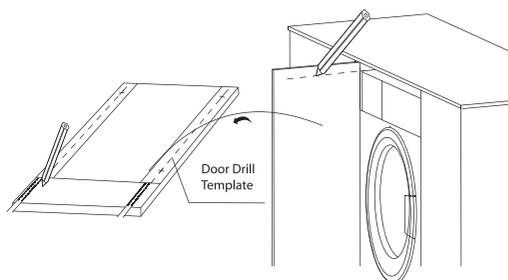


- Decide from which direction the cabinet door will open.

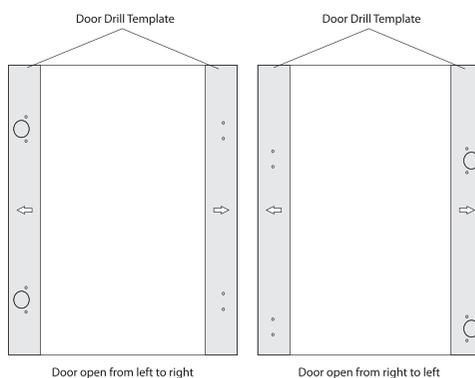


- Depending on the direction the cabinet door will open and close, drill holes (hinge \varnothing 35 mm; screw \varnothing 2 mm) on the cabinet door according to the markings and measurements on the Door Drill Template.

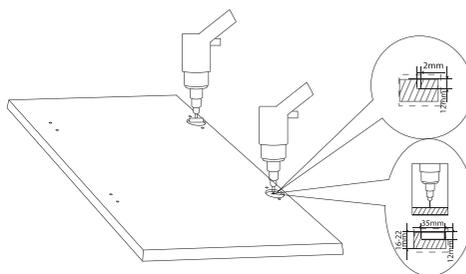


- Screw the hinges on the cabinet door using screw A.
- Screw the spacers on the cabinet door using screw A.

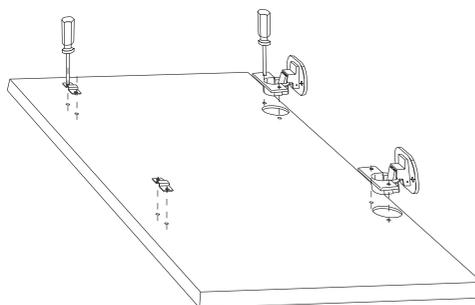

- Depending on the direction the cabinet door will close, screw the magnets on the machine using screw B.

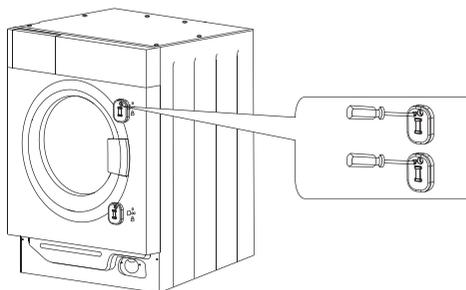

7. Fix the cabinet door on the machine.
Screw the hinges on the machine using screw B.
8. Close the cabinet door. Spacers on the cabinet door shall attract to the magnets on the machine.

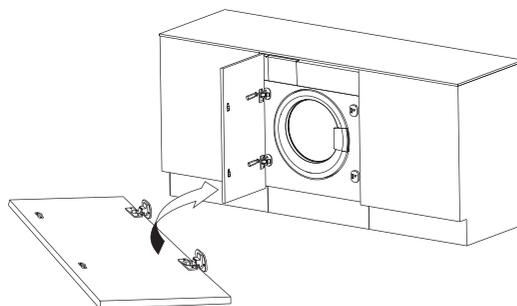

Connecting to the Mains Supply

For your safety:

- Do not use a mains plug adapter or extension cable.
- If the mains cable or mains plug are damaged, stop using them and call a qualified technician for assistance.
- An earthed plug has been attached to the power cable of your washer dryer . This plug must be inserted into an earthed socket capable of supplying 13 Amps. If you have no such sockets and fuses in your house, call a qualified electrician.
- The mains plug must remain accessible to allow disconnection or an all pole switch must be incorporated in the fixed wiring in accordance with the wiring rules.

Installation Check List


By now, you should have installed the washer dryer.

Let's go through the checklist to ensure that the installation has been done correctly!


Questions		Checkbox
Transit bolts - Have you removed them and attached the cover caps properly?		
Levelling feet	Adjustable Feet - Are they bolted securely to the washer dryer ?	
	Feet Cushions - Are they standing flat?	
Power supply - Is the household dedicated mains socket rated for 220V - 240V AC and can supply 13 Amps?		
Location - Is your washer dryer on a flat, stable surface?		
Water Supply Hose - Is it free from leaks and is the water supply normal?		

Product Overview

The unit

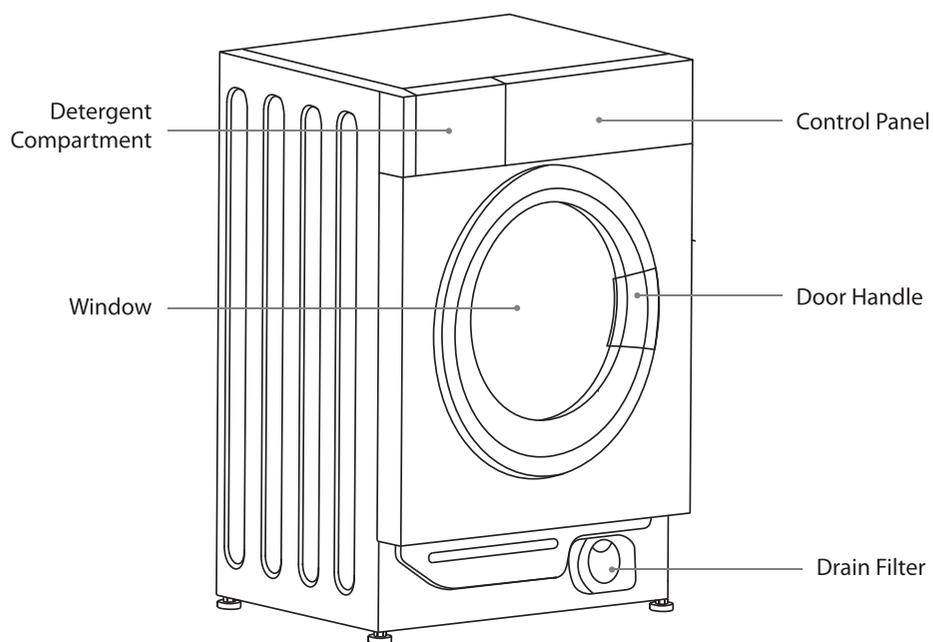

The Control Panel

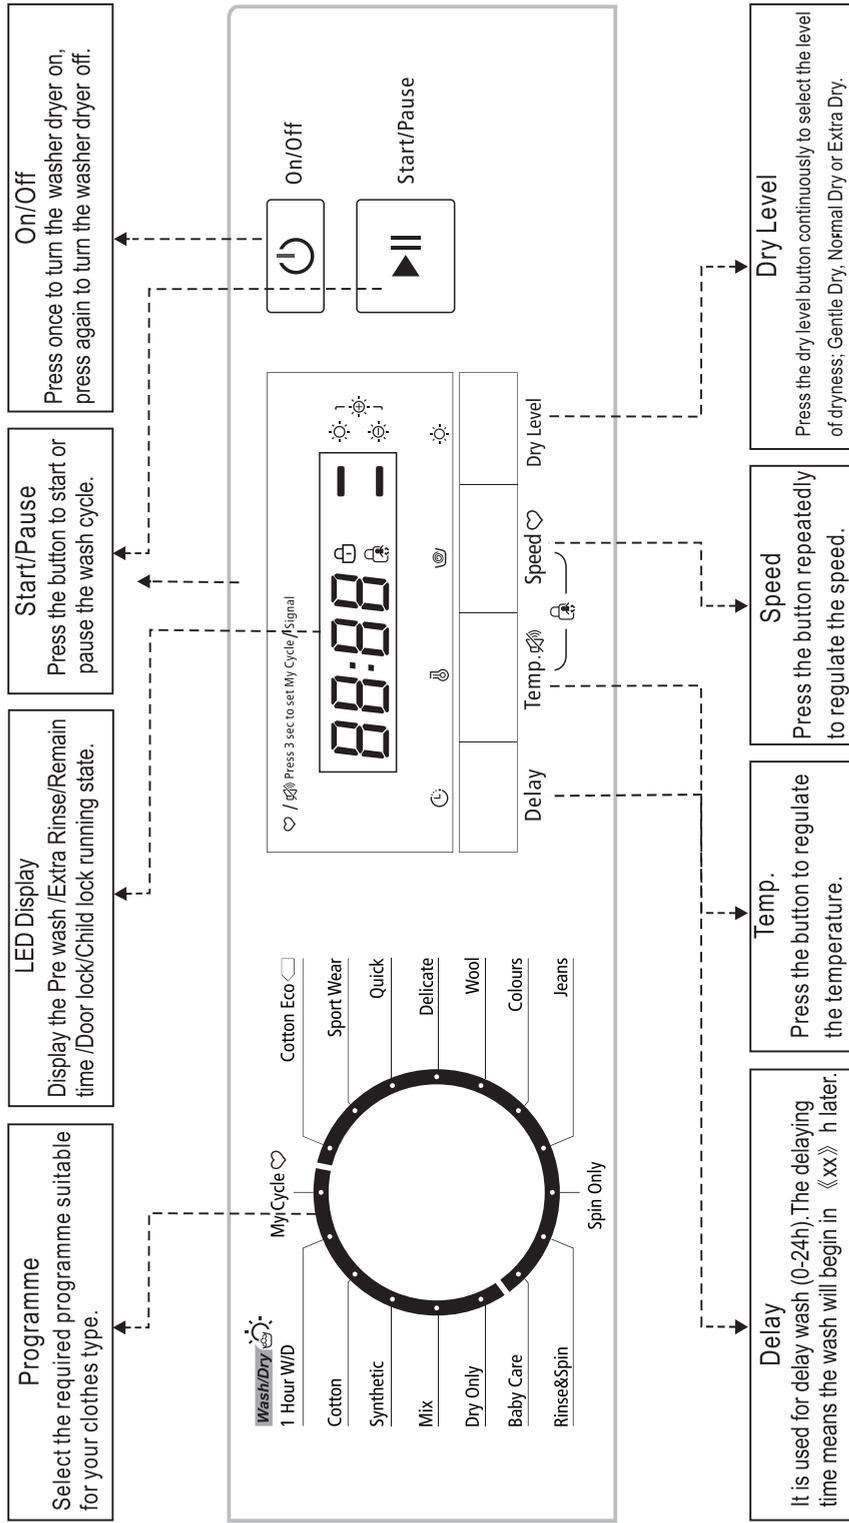

Notes:

1. The Control panel line chart is for reference only, Please refer to real product as standard.
2. The Control panel could be changed without written notice. Please visit the Stoves website or call the Customer Service helpline for more information.
3. When the lights of Speed (400,600,800,1000,1200,1400) are off means the speed is 0.

Preparation

Read the following to understand how best to prepare your laundry for washing.


Organising Laundry

- Read the washing label on each garment to help you sort your washing into different loads.
- Sort the laundry by colour, type of fabric and by how soiled it is. This will help you choose the correct programme and temperature for each wash.
- Do not exceed the maximum load! See the table for the maximum load of the type of fabric to wash.

Fabric Type	Washing/Drying Max.load(kg)
Cotton	8.0/6.0
Synthetics	8.0/4.0
Wool	2.0
Delicates	2.5


Preparing Laundry

- Treat stains before washing.
- Some items should be put into a cleaning net before going into the washer dryer . i.e. bras with metal wires, tights and lace clothing to prevent damage.
- Check that pockets do not contain any objects which may damage your clothes and the washer dryer .
- Tie up any loose strings on laundry, close zippers and reverse clothing with zips inside out.
- To prevent any large, heavy objects (e.g., buckles, large buttons, etc.) from hitting the glass door, turn your clothing inside out, or remove the heavy objects. These could damage your laundry or the washer dryer .
- Remove any surplus hair, animal fur, sand, and other materials with a brush before washing.
- If clothes have raised fabric, turn them inside out.
- Clothes that are not colour fast should be washed separately.
- Insert your clothes into the washing machine. Close the washer dryer door. Ensure that you do not trap any items of clothing between the loading door and the rubber seal.

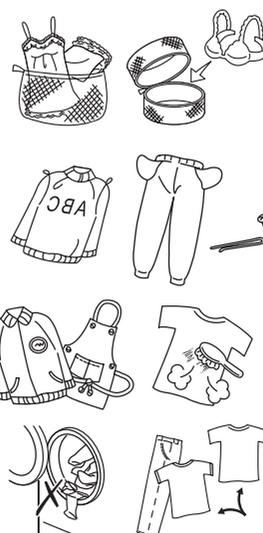

Adding Detergent and Softener

- Add detergent into the appropriate dispenser.
- Apply softener before you start washing.
- Apply detergent and softener according to the washing amount, the soiling level, the water hardness in your area and the manufacturer's instructions of these products.
- For slightly dirty clothes, put a small amount of detergent into compartment II of the detergent drawer.
- For excessively dirty clothes, put $\frac{1}{4}$ of the detergent to be used into compartment I of the detergent drawer and the remaining amount into compartment II.
- Do not use the washing machine when the detergent drawer is removed. It may cause a water leak or it may not work normally.
- If you forget to add detergent, you can drain the washer dryer by running a drain only programme. Then you can add detergent and start the programme again. Detergent only reaches the drum when water flushes through the detergent drawer.
- To prevent powder detergent from staying in the drawer, dry the inside of the drawer with a cloth. Make sure the powder isn't lumpy when you add it into the drawer.
- If the rinse cycle isn't removing all the detergent from your wash, use less detergent.
- Softener should not exceed the MAX level in the compartment.
- Wash out unused softener with a splash of water or a damp cloth after the programme has finished.
- You can use liquid detergent in all programmes. For this, pour the required amount of liquid detergent into compartment II of the detergent drawer.

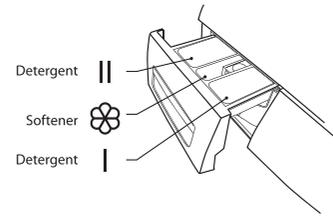

Before First Use


Before washing your clothes for the first time, run a full wash programme first:

1. Connect the machine to the mains power supply and the water supply.
2. Put a small amount of detergent in the detergent drawer. Close the drawer.
3. Press the **Power** button.
4. Select a wash programme.
5. Press the **Start / Pause** button.

Wash Setting

Standard Washing

1. Pull the door handle and put the laundry in the drum. (Refer to Preparation to sort your laundry before it goes into the drum.) Make sure no washing gets caught in the door. Close the door.
2. Press the **Power** button and turn the **Programme Dial** to select your wash programme.
3. Select other functions if desired.
4. Add detergent into the detergent drawer. The quantity of detergent will depend on the amount of laundry, the degree of soiling and the water hardness. Use the amount of detergent suggested on the packaging.
5. Press the **Start / Pause** button to start the washing.
6. The washer dryer will sound when the wash programme is completed.

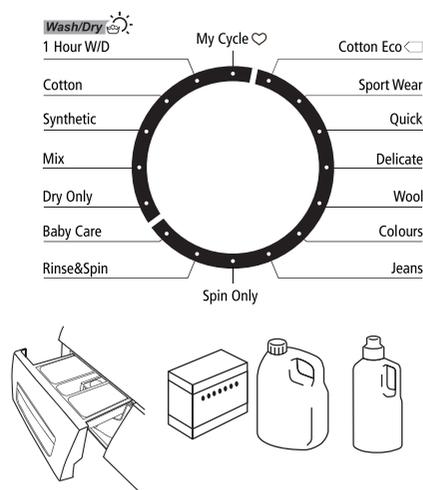

Removing Washing (Once programme is finished)

- Door remains locked for 1 minute after wash stopped.
- Open the washer dryer door and remove your washing.
- Remove any foreign objects to avoid risk of rusting.
- Leave the door and detergent drawer open so that residual water can evaporate.

Option

Delay

Delay

Set the Delay function:

1. Select a programme
2. Press the Delay button to choose the time (the delaying time is 0-24 H.)
3. Press [Start/Pause] to commence the delay operation



On/Off

Choose the Programme

Setting time

Start

Cancel the Delay function:

Press the [Delay] button until the display be 0H. It should be pressed before starting the programme. If the programme already started, should press the [On/Off] button to reset the programme.

! Caution!

- If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and when the power is restarted, press the [On/Off] button the program will continue.

Programme	Option	Programme	Option
	Delay		Delay
Cotton Eco	<input type="radio"/>	Rinse&Spin	<input type="radio"/>
Sport Wear	<input type="radio"/>	Dry Only	<input type="radio"/>
Quick	<input type="radio"/>	Mix	<input type="radio"/>
Delicate	<input type="radio"/>	Baby Care	<input type="radio"/>
Wool	<input type="radio"/>	Synthetic	<input type="radio"/>
Colours	<input type="radio"/>	Cotton	<input type="radio"/>
Jeans	<input type="radio"/>	1 Hour W/D	—
Spin Only	<input type="radio"/>		

Means optional

Other Functions



My Cycle

Memory the frequently used programmes

Press [] 3sec. to memory the running programme. The default is cotton.



Child Lock

To avoid mis-operation by children.



On/Off



Start/Pause



Press [Temp] and [Speed] for 3 secs. until the buzzer beeps

⚠ Caution!

- Press the 2 buttons again for 3 secs to release the child lock function
- The "Child Lock" will lock all buttons except [On/Off].
- If the power supply is cut off, the child lock will be released.
- The child lock will remain effective when the power is resumed.



Speed

Press the button to change the spin speed.

Programme	Default Speed(rpm)	Programme	Default Speed(rpm)
	1400		1400
Cotton Eco	800	Rinse&Spin	800
Sport Wear	800	Dry Only	1400
Quick	800	Mix	1000
Delicate	600	Baby Care	1000
Wool	400	Synthetic	1200
Colours	800	Cotton	1400
Jeans	800	1 Hour W/D	1400
Spin Only	800		

⚠ Caution!

- When the lights of speed are off means the spin speed is 0.



Temp.

Press the button to regulate the temperature(Cold,20°C,30°C, 40°C,60°C,90°C)



Mute the buzzer



On/Off



Start/Pause



Press the [Temp.]button for 3sec.the buzzer is mute.

To resume the buzzer sounds, press the button again for 3 seconds. This setting will be kept until the next machine reset.

! Caution!

- After Muting the buzzer function, the sounds will not be activated any more.



Dry Level

Press the Dry Level button continuously to choose the dry level: Extra Dry/Normal Dry/ Gentle Dry.

- ☀ Extra Dry: Thoroughly dries the garments, for example if you need to wear clothes immediately
- ☀ Normal Dry: The normal dry procedure
- ☀ Gentle Dry: Dries clothing lightly

📌 Note!

- Drying hints
 - Clothes could be dried after spinning
 - To ensure proper drying of items, please sort them according to the textile type and use the correct drying temperature.
 - Synthetic should be set the proper drying time .
 - If you want to iron the items straight after drying, don't dry thoroughly.
- Clothes not suitable for drying
 - Particularly delicate items such as synthetic curtains,woolen and silk, clothes with metal inserts,nylon stockings,bulky clothes,such as anoraks,bedcovers,quilts,sleeping bags and duvets must not be dried.
 - Clothes padded with foam-rubber or materials similar to foam-rubber must not be machine dried.
 - Fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.

Programmes

Programmes are available according to the laundry type.

Programmes	
Cotton	Suitable for fabrics made of cotton or linen, for example t-shirts, bed sheets and towels etc.
Cotton Eco	This is the most energy efficient programme to clean cotton laundry.
Synthetic	You can select this programme to wash synthetic laundry. The programme procedure is shorter than cottons, with the drum movements more gentle. For synthetic items, the amount of detergent should be reduced as bubbles may form more easily.
Baby Care	This programme is ideal for baby fabrics. It will ensure the fabric is thoroughly cleaned and rinsed so that there is less chance of irritating the baby's skin.
Jeans	Specially for jeans.
Mix	Mixed load consisting of textiles made of cotton and synthetics.
Colours	This programme protects the vibrancy of brightly coloured fabrics.
Sport Wear	Washing the activewear.
Quick	15 minute quick wash in cold water - suitable for lightly soiled clothes that need freshening up
Delicate	Slower spin speeds and gentle drum movements to better protect delicate clothing and materials.
Wool	For hand or machine washable wool textiles. A very gentle wash programme to prevent shrinkage. Please ensure a detergent suitable for wool is used.
Spin Only	Extra spin with selectable spin speed.
Rinse&Spin	Extra rinse with spin.
Dry Only	Select this programme to dry laundry.
1 Hour W/D	For small synthetic clothes or shirts, with a 1KG load limitation (approx. 4 shirts. Ideal if you need something clean and dry in a hurry. Note: Towels and Jeans are not suitable for this programme, and the time and moisture content will be affected.

Note!

- Select the correct programme suitable for your laundry items.

Washing Programmes Table

Programme	Washing/Drying Load (kg)	Temp.(°C)	Default Time(H)
	8.0	Default	8.0
			1400
Cotton ECO	8.0	30	1:07
Sport Wear	4.0	40	1:19
Quick	2.0	Cold	0:15
Delicate	2.5	30	1:00
Wool	2.0	40	1:07
Colours	8.0	Cold	1:00
Jeans	8.0	40	1:48
Spin Only	8.0	—	0:12
Rinse&Spin	8.0	—	0:31
Baby Care	4.0	60	1:45
☀ Dry Only	—/6.0	—	4:28
☀ Mix	8.0/6.0	40	1:13
☀ Synthetic	8.0/4.0	40	2:20
☀ Cotton	8.0/6.0	40	2:40
☀ 1 Hour W/D	1.0/1.0	Cold	1:00

- The energy class is A Energy test program: Cotton Eco 60°C Speed: the highest speed; Other as the default. Half load for 8.0Kg machine:4.0Kg.
- “Cotton Eco 60°C” is the standard washing program and “Dry only ”is the standard drying programs to which the information in the label and the fiche relates, and they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry,that the actual water temperature may differ from the declared cycle temperature.

Note!


- The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.
- The programme with ☀ can be chosen dry function.

Important Information

Washing Delicates (Wool and Silk Programmes)


These programmes rock the drum gently for best results on delicate laundry.

- Silk laundry loads: 2kg or less
- Tips for Wool programme:
Approximate Weights:
 - Wool sweater (400g)
 - Silk blouse / under garment (200g)
 - Trousers (400g)

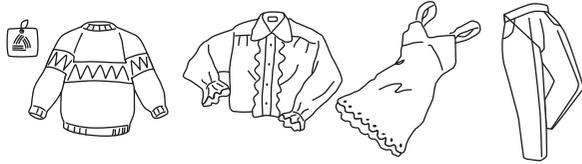

Adding Delicate Laundry Items to the Drum

- Close zips and buttons.
- Add items one by one on top of each other.
- Don't overload the drum as it may cause excessive vibrations or damage washer dryer.

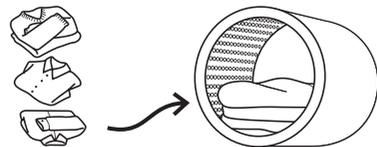

Which Detergent to Use

- For woolen items, use a mild liquid detergent. Other detergents may damage your woolen clothes.
- With Wool or Silk programmes, you may need to use an extra rinse cycle to remove excess detergent from your clothes. This depends on the amount of detergent you use, and the amount of foam that develops in the main wash cycle.

Maintenance - Cleaning the Washer Dryer

Cleaning the Drum

Always unplug the washer dryer before cleaning.

Any rust left inside the drum by metal articles must be removed immediately with chlorine-free detergent.


Never use steel wool.

Cleaning the Exterior of your Washing Machine

- Clean the outside of your washer dryer with a soft cloth and mild detergent such as kitchen detergent.
- Don't splash water over the washer dryer.
- Do not use cream cleansers, thinners or products containing alcohol or kerosene.

Cleaning the Detergent Drawer

1. Remove the detergent drawer by pulling and pressing gently on the rear centre part of the softener compartment.
2. Wash out old detergent from the drawer with water. (Use a cloth to clean the washer dryer.) Residue detergent soon builds up if you don't clean the drawer regularly, and can develop mold.
3. Return drawer to original position.

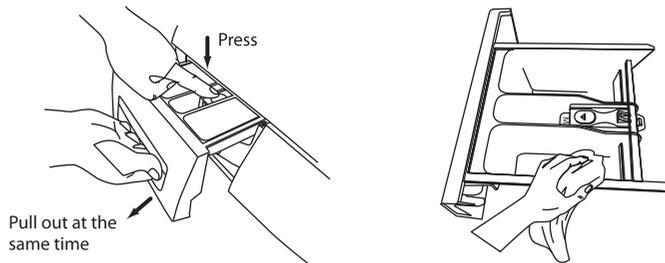

Siphon Plug

Pull out the detergent drawer. Remove the siphon plug and clean any residual softener thoroughly. Fit the cleaned siphon plug in its location. Check it is fitted properly.


Cleaning the Door Seal and Window

- Wipe the window and seal after each wash to remove lint and stains. If lint builds up, it can cause leaks.
- Remove any coins, buttons and other objects from the door seal after each wash.

Cleaning the Drain Filter


Before cleaning the drain filter, switch off and unplug the washer dryer.

1. Carefully loosen the drain filter. Water may drain out - this is normal.
2. Unscrew the filter to remove it.
3. Remove any lint and debris before carefully replacing the filter.
4. Turn the filter clockwise to screw back into place.

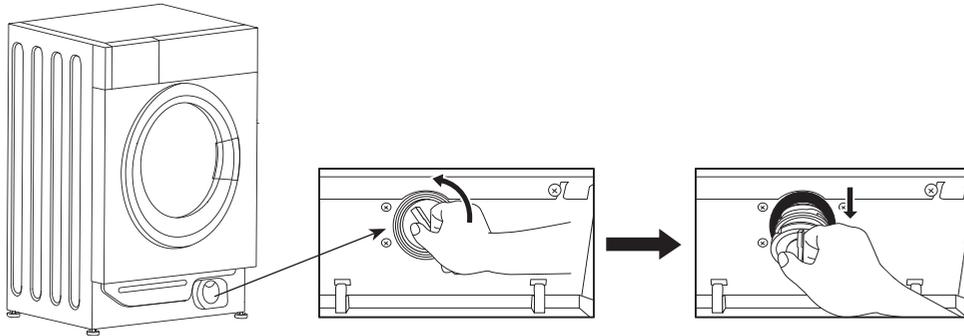

Preventing a Frozen Water Supply Hose

If your washer dryer is delivered in freezing weather conditions, leave it at room temperature for 24 hours after you've set it up before using it. This ensures there's no ice blocking the water supply hose. If your water supply hose freezes, add 2 or 3 litres of warm water to the drum. Then run a "Drain" only programme.

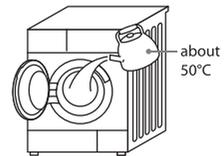

Cleaning the Filter Net of the Water Supply Hose

1. Turn the water supply off at the tap.
2. Close the washer dryer door and select "Drain" programme and press the **Start / Pause** button.
3. When finished, turn the power off. Remove the water supply hose from the tap.
4. Manually remove the filter net located on the tap side of the water supply hose and clean using a small brush (e.g. a toothbrush).
5. Return the filter net to its original position.
6. Re-connect the water supply hose to the tap and turn the tap back on, checking for leaks.

Error Codes

Description	Reason	Solution
E30	Door is not closed properly	Restart after the door is closed Check if the clothes are stuck
E10	Water injecting problem while washing	Check if the water pressure is too low Straighten the water pipe Check if the inlet valve filter is blocked
E21	Overtime water draining	Check if the drain hose is blocked
E12	Water overflow	Restart the washer
EXX	Others	Please try again first, call up service line if there are still troubles

Specifications

Parameter	
Power Supply	220-240V~,50Hz
Washing Capacity	8.0kg
Drying Capacity	6.0kg
Dimension(W*D*H)	595*565*815
Weight	64kg
Rated Power	1900W
Drying Power	1300W

Brand:Stoves
Model:ST IWD8614

Rated capacity:8kg / 6kg
Energy efficiency class:A
EU Ecolabel:N/A

Energy consumption 1088kwh per year, based on 200 standard washing cycles for cotton at 60°C/40°C at full and partial load, and the consumption of the low-power modes.Actual energy consumption will depend on how the appliance is used.

Water consumption 30400 litres per year, based on 200 standard washing cycles for cotton 60°C /40°C at full and partial load. Actual water consumption will depend on how the appliance is used.

Spin-drying efficiency class A on a scale from G (least efficient) to A (most efficient)
Maximum spin speed:1400rpm

Consumption values(1400rpm):

Standard Programme	Load	Energy consumption	Water consumption	Remaining moisture content	Programme duration
Cotton 60°C	8kg	0.94kwh	64L	44%	310min
Drying	6.0kg	4.50kwh	88L	0%	340min
Cotton 40°C	4.0kg	0.67kwh	45L	55%	166min

Notes:

1. Programme setting for testing in accordance with applicable standard EN50299:2007+ Commission Directive 96/60/EC
2. When using the test programmes, wash the specified load using the maximum spin speed.
3. The actual parameters will depend on how the appliance is used,and maybe different with the parameters in above mentioned table.

Off mode power consumption:0.5W
Left-on mode power consumption:1.0W

Airborne acoustical noise (washing): 54
Airborne acoustical noise (spinning): 78
Airborne acoustical noise (drying): 62

Notes: The airborne acoustical noise emissions during washing/spinning /drying for the cotton 60°C programme at full load.

Stoves Customer Care

Please keep this handbook in a safe place.

Please fill in the model number and serial number in the spaces provided below as they will assist us should you need to call.

0844 815 3740

When you dial this number you will hear a recorded message and be given a number of options. This indicates that your call has been accepted and is being held in a queue. Calls are answered in strict rotation as our Customer Care Representatives become available.

Enter appliance numbers here for future reference:

Model No									
Serial No									

These numbers can be found on your appliances.
Outside the UK and Northern Ireland, refer to your local supplier.

STOVES

Stoney Lane, Prescot, Merseyside, L35 2XW