



**BELLING RCA
COOKCENTRE AND
FARMHOUSE 90CM DUAL
FUEL RANGE COOKERS -
PRE-INSTALLATION
CHECKLIST**





Thank you for choosing a Belling Cookcentre or Farmhouse 90cm Dual-Fuel Range Cooker, which we hope will give you many years of excellent service and cooking enjoyment. To allow the cooker installation to proceed as smoothly as possible, please check the following points to make sure you have the correct services available for your new cooker.

This document relates to these models:



Cookcentre Models	
444411793 BEL RCA COOKCENTRE 90DF BLK Black	444411794 BEL RCA COOKCENTRE 90DF STA Stainless Steel
Farmhouse Models	
444411819 BEL RCA FARMHOUSE 90DF ANT Anthracite	444411820 BEL RCA FARMHOUSE 90DF BLK Black
	444411821 BEL RCA FARMHOUSE 90DF CRM Classic Cream

Gas cooker connection point

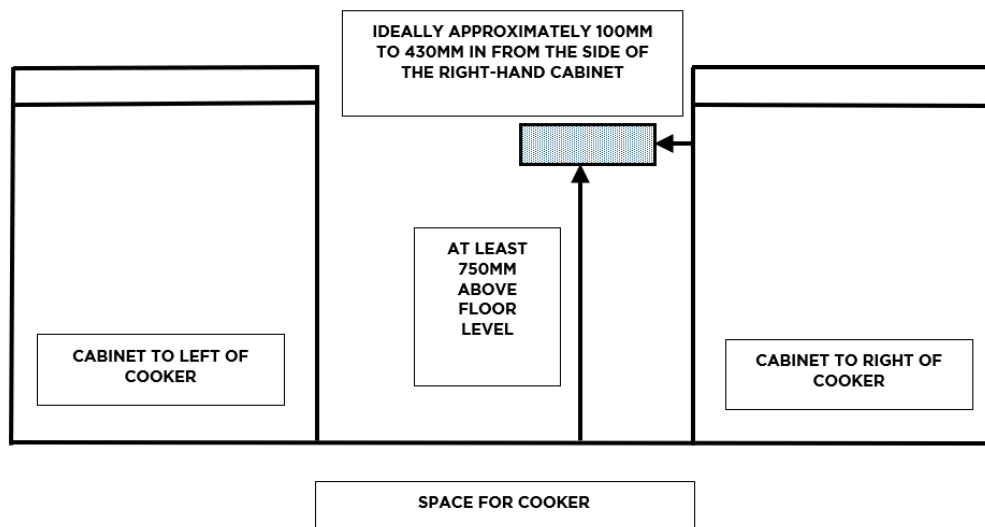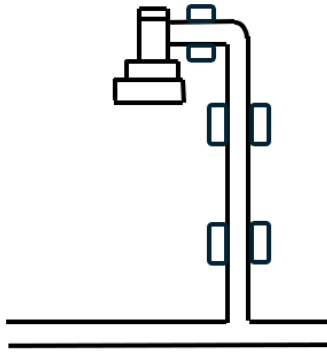

- A gas cooker connection point is required on the wall behind the cooker, within 1 metre of the cooker.
- It must be readily accessible behind the cooker, not behind drawers or in cupboards.
- The gas cooker connection point must be positioned at least 750mm above floor level, and, ideally, be positioned approximately 100mm to 430mm in from the side of the right-hand cabinet; this is so that, when the new cooker is installed, the gas hose will be able to hang in a smooth 'U' shape between the gas cooker connection point and the cooker's gas supply inlet.
- The gas cooker connection point should not project more than 35mm from the wall and should be a ½ inch diameter bayonet fitting type.
- If you currently have / have had a gas or dual-fuel cooker, then you should already have a gas connection point.
- Do not attempt to move the current cooker unless it is safe to do so.


Ventilation

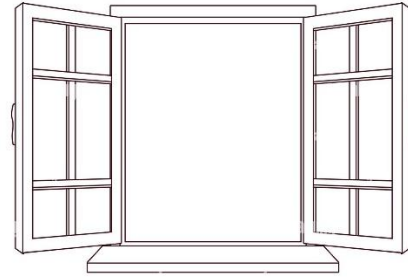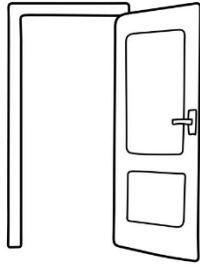


- The kitchen must have an openable door or window which opens directly to the outside.

Electrical Connection


Cooker Switch

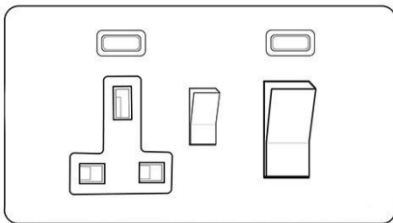

Cooker switch with 3 pin socket - suitable

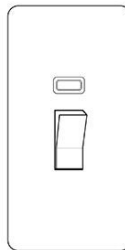



Cooker switch without 3 pin socket - suitable

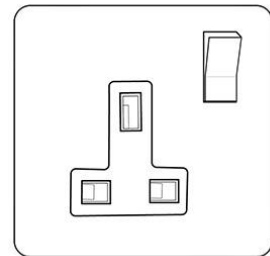

Standard 13 amp 3 pin socket - not suitable

- Look for your cooker switch on the wall in the kitchen or in a cupboard adjacent to the cooker.
- The cooker switch must be accessible and should not be directly behind the cooker.

Fuse Box / Consumer Unit

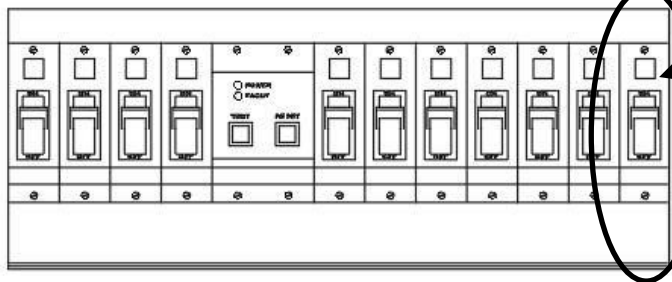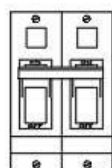



B32





COOKER CIRCUIT

- The fuse box / consumer unit may be located on the wall or in a cupboard, for example in the hallway, corner of a room, or under the stairs, and is a plastic box with a row of switches.
- Look for the switch labelled 'cooker circuit' or with a picture of a cooker.
- There will usually be a number above the switch which represents the amp rating, for example: B16=16 amps, B20=20 amps, B32=32 amps, B40=40 amps, B45=45 amps.
- Compare this amp rating with the minimum power rating required shown below, to make sure that there is enough power for the new cooker.

Cooker Circuit Power Rating Required

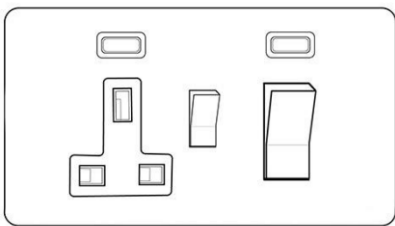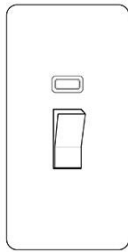Cooker Switch Type		
Minimum Power Rating Required – Cookcentre Models	32 amps	20 amps
Minimum Power Rating Required – Farmhouse Models	32 amps	20 amps


RCD

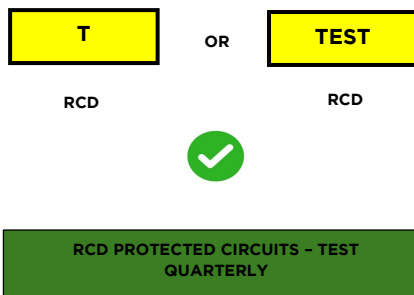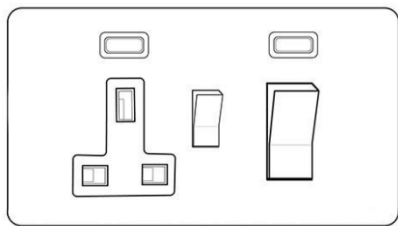

CIRCUITS NOT PROTECTED

- If the cooker switch also includes a 3 pin socket, the cooker circuit must be protected by a safety device called an RCD (residual current device) – this is usually indicated by a green sticker stating, 'RCD protected circuits – test quarterly' and / or an RCD push button labelled 'T' or 'TEST'.

Available Space

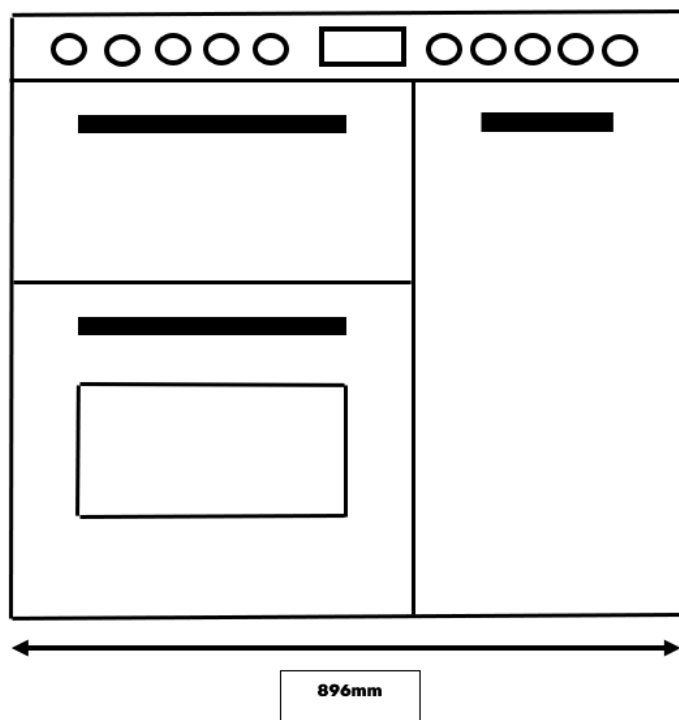

**DEPTH OF COOKER
EXCLUDING DOOR
HANDLES: 596MM**

**DEPTH OF DOOR
HANDLES: 40MM
FOR COOKCENTRE
MODELS AND
50MM FOR
FARMHOUSE
MODELS**


**900 -
930
mm**

896mm

- The cooker is 896mm wide and designed to fit into a standard 90cm-wide gap.
- The cooker can be fitted flush to the adjacent base units.


Clearances

Hot-zone

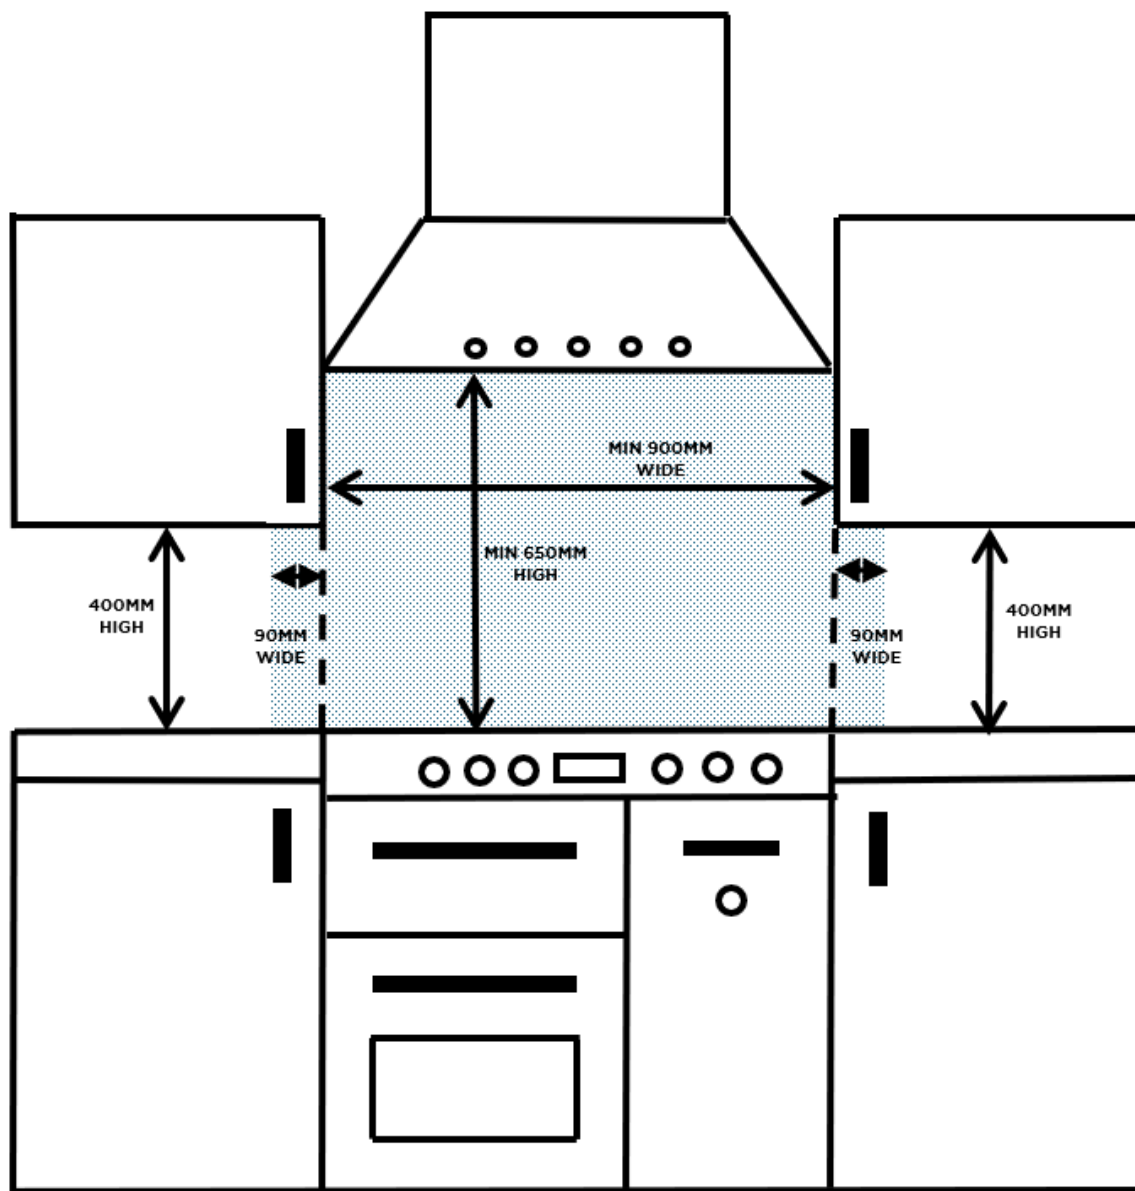


- The shaded areas must be free of combustible materials.
- This could include things like cooker hoods, wooden panelling, wooden shelves, window sills, cupboards, wallpaper, blinds, curtains, vinyl tiles and plastic trunking, etc.
- Please note, the cooker can be installed in an alcove/disused chimney breast where the vertical height clearance between the hob and the top of the alcove/chimney breast is less than 650mm, provided that the alcove/chimney breast is made from only non-flammable materials, such as brick, tile, stone, iron or steel.
- In addition, there should be no combustible materials, such as wooden panelling, wallpaper, vinyl tiles or plastic trunking, directly behind the cooker.

Electric switches and sockets

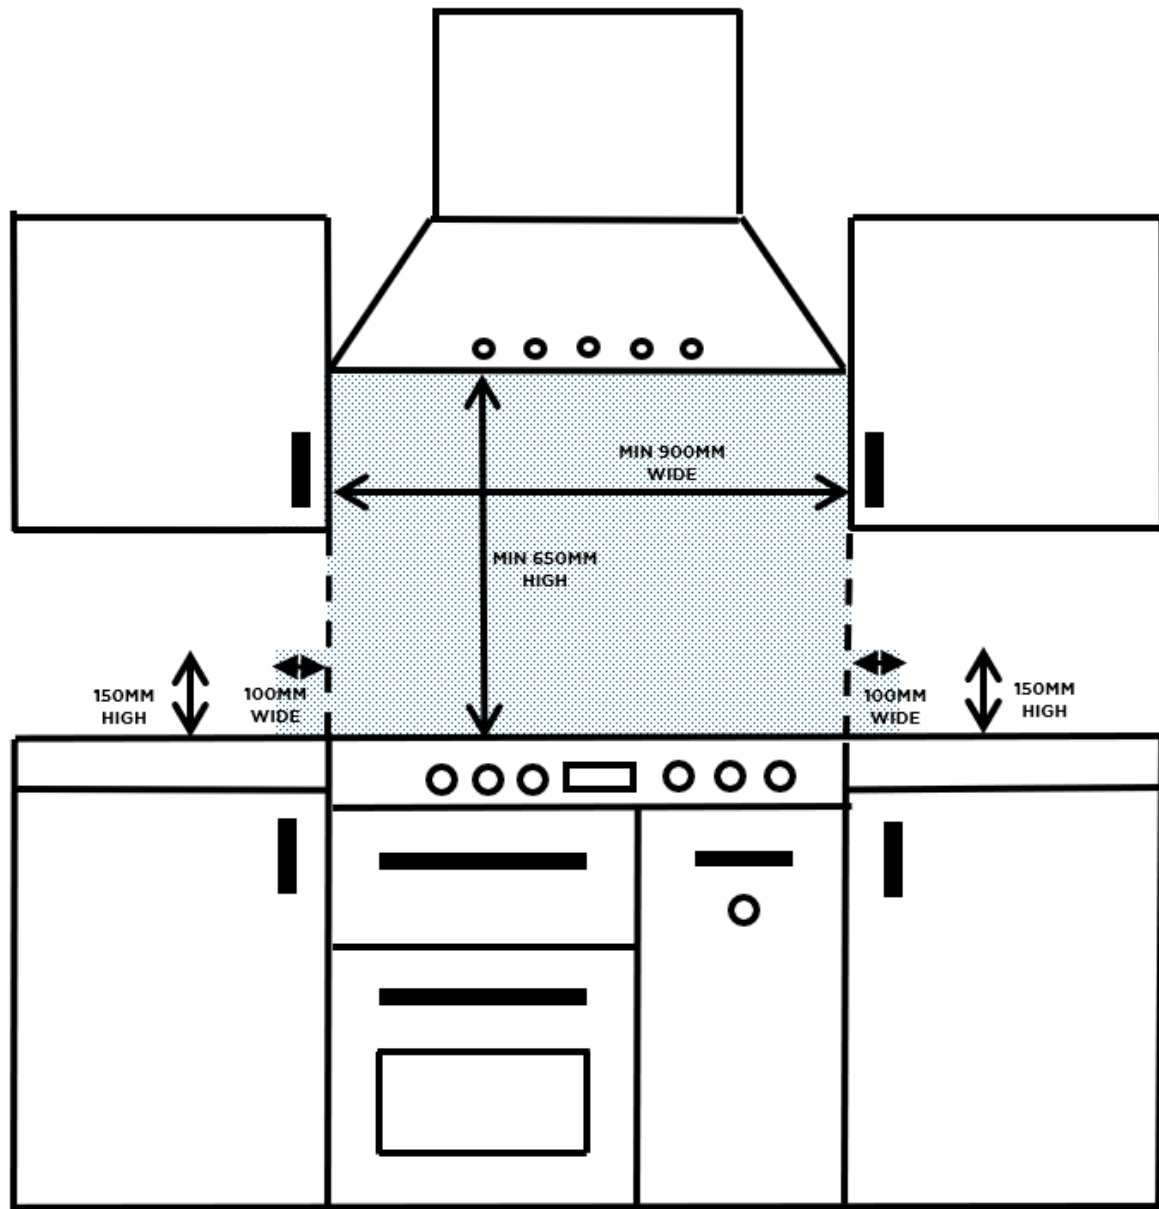

- The shaded areas must be free of electrical switches and sockets.

Side-clearance below hob level

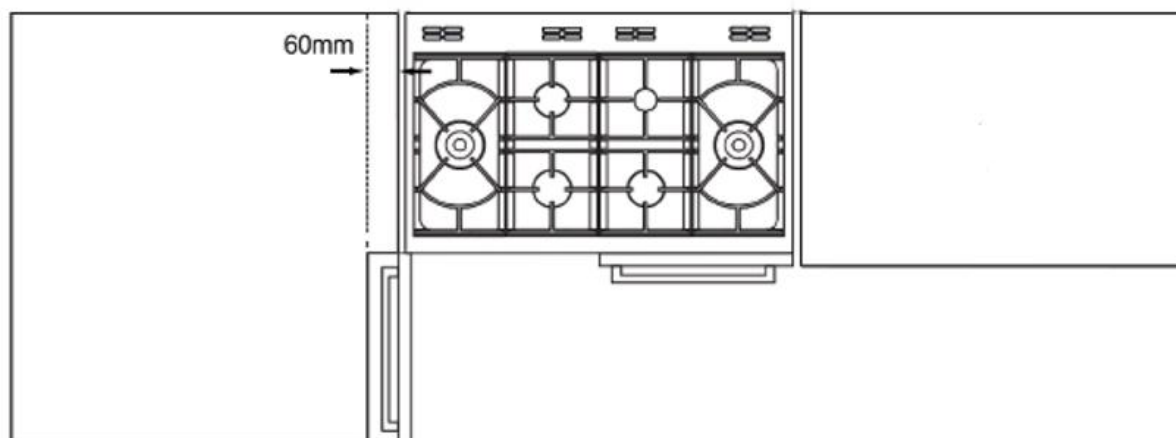

- The 60mm side clearance is only required if the cooker is being installed in a corner or at right-angles to adjacent units, to allow space for the side-opening oven door to open fully.
- No side clearance below hob level is required when the cooker is being installed between a straight run of kitchen units.

For further assistance

If you have any queries, please contact us at Belling:

E-mail: homedeliveries@gdha.com

The full product installation guide is available online at:

<https://www.belling.co.uk/en-gb/customer-support/user-guides-and-downloads>

If you need assistance from a local Gas-Safe registered fitter (e.g. regarding installing or moving the gas cooker connection point), please visit:

<https://www.gassaferegister.co.uk/find-an-engineer-or-check-the-register/>

If you need assistance from a local qualified electrician (e.g. to install or upgrade a cooker circuit), please visit:

<https://niceic.com/find-a-tradesperson/>



Glen Dimplex Home Appliances
Element, Temple Court, Risley, Warrington, WA3 6GD
0344 815 3746
www.belling.co.uk
PIC RC BEL 90 DF UK V1