Electric Built-in Oven 3-Key Timer Instructions – from September 2023

Which models does this information relate to?	444410216 Stoves BI902MFCT stainless steel 444410217 Stoves BI902MFCT black 444411402 Belling BI903MFC stainless steel 444411403 Belling BI903MFC black 444411630 Belling BI703MFC black 444411631 Belling BI703MFC stainless steel 444444773 Belling BI602FP stainless steel 444444774 Belling BI602FP black 444444781 Belling BI702FP stainless steel 444444782 Belling BI702FP black 444444783 Belling BI702FPCT stainless steel 444444784 Belling BI702FPCT black 444444785 Belling BI902FP stainless steel 444444786 Belling BI902FP black

Full timer instructions:

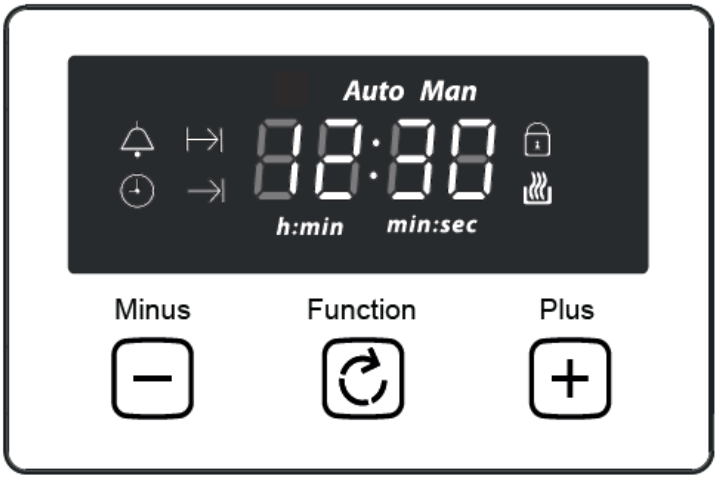

	Minute minder	***Man***	Manual mode
	Cooking time / Duration	L 1,L2,L3	Volume level
	End of cooking time	23:59	7-segment display
	Clock Symbol	99:00	Max. adjustable minute minder
	Keylock	23:59	Max. adjustable cooking time
	Cookpot Symbol	***h:min***	Display hours:minutes
Auto	Automatic mode	***min:sec***	Display minutes:seconds

Key points to note:	
Manual Mode:	• The main oven will not switch on manually unless the timer is in manual mode. • With the main oven door closed, press and hold the function key for approximately 3 seconds until 'Man' ***Man*** and the cookpot symbol appear in the display. • The main oven can now be used manually by selecting a function and a temperature as usual.
'DOOR' message in display:	• This message will be displayed if the main oven door is not fully closed. • Close the main oven door fully. • If the main oven door is opened during cooking the 'DOOR' message will be displayed and the heating will be switched off temporarily. • The heating will resume when the main oven door is closed again. • The timer keys cannot be used while the main oven door is open. • If the minute minder duration and/or cooking duration times have been set, these will continue to run down while the door is open.
Padlock symbol in display:	• The child-lock may have been activated in error. • Press and hold the plus key for approximately 5 seconds until the padlock symbol disappears from the display. • Please note, you cannot deactivate the child-lock while an automatic cooking programme is in progress.
Timer resetting itself to '00:00' and beeping:	• The timer may have been left in manual mode after switching the oven off by turning the function selector and temperature selector knobs to the '12 o'clock' off position. • After approximately 12 hours in manual mode, without any cooking function selected, the timer will return to standby mode and show '00:00' in the display, with the alarm sounding. • Press the function key once and the timer will show the current time of day as usual. • To prevent this happening, please try to put the timer back into standby mode when you have finished cooking. • With the main oven door closed, press and hold the function key for approximately 3 seconds until 'Man' ***Man*** and the cookpot symbol disappear from the display.

Setting the time of day:	
The current time of day must be set before using the automatic cooking functions.	
Setting the time of day when oven is first connected to the power supply:	• When the appliance is first powered on, the timer digits will flash and the clock symbol flashes. • While the display is flashing, use the plus and/or minus keys to set the current time of day. • If you press and hold the plus or minus key, the time will increase or decrease more rapidly. • A few seconds after the last key press, the display will stop flashing and the time of day is accepted. • The timer returns to standby mode.
Adjusting the time of day later:	• Press the function key repeatedly until the clock symbol starts to flash. • While the display is flashing, use the plus and/or minus keys to set the current time of day. • If you press and hold the plus or minus key, the time will increase or decrease more rapidly. • A few seconds after the last key press, the display will stop flashing and the time of day is accepted. • The timer returns to standby mode.

Selecting manual mode:	
The timer must be in manual mode for the main oven to be switched on manually. If a main oven function is selected while the timer is in standby mode, the main oven lamp will come on, but the main oven won't start to heat up. This can be useful when wiping the oven cavity.	
Selecting manual mode:	• With the main oven door closed, press and hold the function key for approximately 3 seconds until 'Man' ***Man*** and the cookpot symbol appear in the display. • The main oven can now be used manually by selecting a function and a temperature as usual.

Returning the timer to standby mode:	
Please return the timer to standby mode after you have finished cooking.	
Returning to standby mode:	• With the main oven door closed, press and hold the function key for approximately 3 seconds until 'Man' ***Man*** and the cookpot symbol disappear from the display.

Using the minute minder:	
The minute minder function makes the timer beep after a certain amount of time, but will not switch the main oven off automatically. The minute minder function can be used to remind you to check on, stir, turn or baste food, or to time any activity in the kitchen, such as boiling an egg on the hob.	
Setting the minute minder:	• Press the function key repeatedly until the bell symbol starts to flash. • While the bell symbol is flashing, use the plus and/or minus keys to set the required minute minder duration time. • If you press and hold the plus or minus key, the time will increase or decrease more rapidly. • A few seconds after the last key press, the display will stop flashing, the minute minder duration time will be accepted, and starts to count down. • When the minute minder duration time has elapsed, the alarm sounds. • Press the function key to silence the alarm, or the alarm will stop automatically after approximately 7 minutes, and the display returns to showing the current time of day.
Checking / adjusting the minute minder:	• Press the function key repeatedly until the bell symbol starts to flash. • The remaining minute minder duration time is displayed. • While the bell symbol is flashing, use the plus and/or minus keys to adjust the minute minder duration time. • If you press and hold the plus or minus key, the time will increase or decrease more rapidly. • A few seconds after the last key press, the display will stop flashing, the new minute minder duration time will be accepted, and starts to count down.

	• When the minute minder duration time has elapsed, the alarm sounds. • Press the function key to silence the alarm, or the alarm will stop automatically after approximately 7 minutes, and the display returns to showing the current time of day.
Cancelling the minute minder:	• Press the function key repeatedly until the bell symbol starts to flash. • The remaining minute minder duration time is displayed. • While the bell symbol is flashing, use the minus key to adjust the minute minder duration time to zero. • If you press and hold the minus key, the time will decrease more rapidly. • A few seconds after the last key press, the display will stop flashing and the bell symbol will disappear from the display. The minute minder function has been cancelled.
Available values:	• A minute minder time of between 1 minute and 99 minutes can be set.

Using the semi-automatic cooking function:	
Semi-automatic cooking allows you to start the cooking now and the timer will automatically switch the main oven off when the cooking time is complete.	
Setting the cooking duration time:	• Place the food in the main oven, and select the cooking function and temperature as usual. • Press the function key repeatedly until the cooking duration symbol starts to flash. • While the cooking duration symbol is flashing, use the plus and/or minus keys to set the required cooking duration time. • If you press and hold the plus or minus key, the time will increase or decrease more rapidly. • A few seconds after the last key press, the display will stop flashing, the cooking duration time will be accepted, and starts to count down.

	• The 'Auto' symbol Auto and the 'cookpot' symbol light up to show that the automatic cooking programme is in progress. • When the cooking duration time has elapsed, the main oven is switched off, the alarm sounds and the 'Man' icon Man starts to flash. • Turn the function selector and temperature selector knobs back to the '12 o'clock' off position. • Press the function key Function once to silence the alarm, or the alarm will stop automatically after approximately 7 minutes, • Press the function key Function again and the display returns to standby mode, showing the current time of day. • If you wish to carry on cooking manually (for example turning the function selector to top heat to brown the food for 10 minutes), with the main oven door closed, press and hold the function key Function for approximately 3 seconds until 'Man' Man and the cookpot symbol appear in the display. • The main oven can now be used manually by selecting a function and a temperature as usual.
Checking / adjusting the cooking duration time:	• Press the function Function key repeatedly until the cooking duration symbol starts to flash. • The remaining cooking duration time is displayed. • While the cooking duration symbol is flashing, use the plus Plus and/or minus Minus keys to adjust the required cooking duration time. • If you press and hold the plus Plus or minus Minus key, the time will increase or decrease more rapidly. • A few seconds after the last key press, the display will stop flashing, the revised cooking duration time will be accepted, and starts to count down. • The 'Auto' symbol Auto and the 'cookpot' symbol light up to show that the automatic cooking programme is in progress.

	• When the cooking duration time has elapsed, the main oven is switched off, the alarm sounds and the 'Man' icon **Man** starts to flash. • Turn the function selector and temperature selector knobs back to the '12 o'clock' off position. • Press the function key Function once to silence the alarm, or the alarm will stop automatically after approximately 7 minutes, • Press the function key Function again and the display returns to standby mode, showing the current time of day. • If you wish to carry on cooking manually (for example turning the function selector to top heat to brown the food for 10 minutes), with the main oven door closed, press and hold the function key Function for approximately 3 seconds until 'Man' **Man** and the cookpot symbol appear in the display. • The main oven can now be used manually by selecting a function and a temperature as usual.
Cancelling the cooking duration time:	• Press the function Function key repeatedly until the cooking duration symbol starts to flash. • The remaining cooking duration time is displayed. • While the cooking duration symbol is flashing, use the minus Minus key to adjust the cooking duration time down to zero. • If you press and hold the minus Minus key, the time will decrease more rapidly. • A few seconds after the last key press, the display will stop flashing, and the semi-automatic cooking function will be cancelled. • The 'Auto' symbol **Auto** goes out. • Turn the function selector and temperature selector knobs back to the '12 o'clock' off position.
Available values:	• A cooking duration time of between 1 minute and 23 hours:59 minutes can be set.

Using the fully-automatic cooking function:

Fully-automatic cooking allows you to place the food in the oven before going out. The timer will automatically switch the main oven on at the appropriate start time and then switch the main oven off when the cooking time is complete. This can be useful when preparing a meal before going out, so that it will be ready in time for your return. You enter a cooking duration time and a cooking end time; the timer will then calculate the cooking start time.

Setting the cooking duration and end times:

- Press the function key

repeatedly until the cooking duration symbol starts to flash.
- While the cooking duration symbol is flashing, use the plus

and/or minus

keys to set the required cooking duration time.
- If you press and hold the plus

or minus

key, the time will increase or decrease more rapidly.
- A few seconds after the last key press, the display will stop flashing, and the cooking duration time will be accepted.
- The 'Auto' symbol

and the 'cookpot' symbol light up.
- Press the function key

repeatedly until the cooking end time symbol is displayed.
- While the cooking end time symbol is flashing, use the plus

and/or minus

keys to set the required cooking end time.
- The 'Auto' symbol

remains on but the 'cookpot' symbol goes out to indicate that the cooking start time has not yet arrived.
- Place the food in the main oven, and select the cooking function and temperature as usual.
- When the cooking start time arrives, the oven heating is switched on and the 'cookpot' symbol appears in the display to indicate that cooking has started.
- When the cooking duration time has elapsed, the main oven is switched off, the alarm sounds, and the 'Man' icon

starts to flash.

	• Turn the function selector and temperature selector knobs back to the '12 o'clock' off position. • Press the function key once to silence the alarm, or the alarm will stop automatically after approximately 7 minutes, • Press the function key again and the display returns to standby mode, showing the current time of day. • If you wish to carry on cooking manually (for example turning the function selector to top heat to brown the food for 10 minutes), with the main oven door closed, press and hold the function key for approximately 3 seconds until 'Man' ***Man*** and the cookpot symbol appear in the display. • The main oven can now be used manually by selecting a function and a temperature as usual.
Adjusting the cooking duration and end times:	• Press the function key repeatedly until the cooking duration symbol starts to flash. • The remaining cooking duration time is displayed. • While the cooking duration symbol is flashing, use the plus and/or minus keys to adjust the required cooking duration time. • If you press and hold the plus or minus key, the time will increase or decrease more rapidly. • Press the function key repeatedly until the cooking end time symbol is displayed. • The current cooking end time is displayed.

	• While the cooking end time symbol is flashing, use the plus  and/or minus keys to adjust the required cooking end time. • A few seconds after the last key press the updated details are accepted. • When the cooking duration time has elapsed, the main oven is switched off, the alarm sounds and the 'Man' icon starts to flash. • Turn the function selector and temperature selector knobs back to the '12 o'clock' off position. • Press the function key once to silence the alarm, or the alarm will stop automatically after approximately 7 minutes, • Press the function key again and the display returns to standby mode, showing the current time of day. • If you wish to carry on cooking manually (for example turning the function selector to top heat to brown the food for 10 minutes), with the main oven door closed, press and hold the function key for approximately 3 seconds until 'Man' and the cookpot symbol appear in the display. • The main oven can now be used manually by selecting a function and a temperature as usual.
Cancelling the automatic cooking function:	• Press the function key repeatedly until the cooking duration symbol starts to flash. • The remaining cooking duration time is displayed. • While the cooking duration symbol is flashing, use the minus key to adjust the cooking duration time down to zero. • If you press and hold the minus key, the time will decrease more rapidly. • Press the function key repeatedly until the cooking end time symbol is displayed.

	• The current cooking end time is displayed. • While the cooking end time symbol is flashing, use the minus key to adjust the cooking end time down to the current time of day. • A few seconds after the last key press the display will stop flashing, and the fully-automatic cooking function will be cancelled. • The 'Auto' symbol goes out. • Turn the function selector and temperature selector knobs back to the '12 o'clock' off position.
Available values:	• A cooking duration time of between 1 minute and 23 hours:59 minutes can be set. • A cooking end time of up to 23 hours:59 minutes after the current time of day can be set.

Adjusting the timer alarm volume:	
The volume (pitch) of the timer can be adjusted between three levels to make it easier to hear or less intrusive.	
Adjusting the timer alarm volume/pitch:	• Press the function key repeatedly until 'L1', 'L2' or 'L3' appears in the display. • While 'L1', 'L2' or 'L3' is displayed, use the plus and/or minus keys to select the required timer alarm volume. • A few seconds after the last key press the display will stop flashing, and the requested timer alarm volume will be stored in the memory.
Available values:	• L1 (quietest tone), L2 (medium tone), L3 (loudest tone).

Activating/deactivating the child-lock:	
The timer child-lock prevents accidental or unauthorised changes being made to the timer settings. Please note that activating the timer child-lock will not prevent the doors being opened or the control knobs being turned.	
Activating the child-lock:	• Press and hold the plus key for approximately 5 seconds until the padlock symbol appears in the display. • The child-lock is now active and pressing the timer keys has no effect. • If an automatic cooking programme is currently in progress, it cannot be adjusted or cancelled and will run through to the end (although you could turn the function selector and temperature selector knobs back to the '12 o'clock' off position to turn off the heating if necessary).

Deactivating the child-lock:	Plus • Press and hold the plus key for approximately 5 seconds until the padlock symbol disappears from the display. • The child-lock has now been deactivated and the timer keys can be pressed as usual. • Please note, you cannot deactivate the child-lock while an automatic cooking programme is in progress. The automatic programme will run through to the end (although you could turn the function selector and temperature selector knobs back to the ’12 o’clock’ off position to turn off the heating if necessary).